

V O L V O P E N T A

OPERATOR'S MANUAL

8L





WARNING!

Operating, servicing and maintaining a marine vessel can expose you to chemicals including engine exhaust, carbon monoxide, phthalates, and lead which are known to the State of California to cause cancer and birth defects or other reproductive harm.

Breathing diesel engine exhaust exposes you to chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. To minimize exposure, avoid breathing exhaust when operating, servicing and maintaining the engine.

- Always start and operate the engine in a well-ventilated area.
- If in an enclosed area, vent the exhaust to the outside.
- Wear gloves or wash your hands frequently when servicing the vessel.
- Do not modify or tamper with the exhaust system.
- Do not idle the engine except as necessary.

For more information

www.P65warnings.ca.gov/marine

www.p65warnings.ca.gov/products/diesel

Table of Content

Foreword	3
Safety Information	4
Introduction	12
Fuel, oils and coolant	13
Maintenance and replacement parts	14
Excessive strain on a product and components	15
Volvo Penta Dealer Network	17
Volvo Penta Action Service	17
Presentation	18
Engines	18
EMS (Engine Management System)	19
Starting	20
Before Starting	20
Starting the Engine	21
Starting in Extreme Cold	21
Never Use Start Spray	22
Starting Using Auxiliary Batteries	22
Operation	23
Reading the Instruments	23
Alarms	23
Maneuvering	23
Operation at low load	23
Engine Shutdown	25
Before Engine Shutdown	25
Stop the Engine	25
Auxiliary Stop	25
After Engine Shutdown	26
Fault handling	27
Diagnostic Function	27
Erasing fault codes	27
Fault Tracing	28
Fault Code Register	30
Maintenance	32
Orientation	32
Engine, General	33
Drive Belt, Check and Replace	33
Lubrication System	35
Oil level, checking and topping up	35
Oil Filter, Replace	36
Engine Oil, Replace	37
Fuel System	38
Draining condensate, fuel system	38
Fuel Filter, Replace	39
Fuel Pre-filter, Replace	39
Cooling System	41
Coolant Level, Checking and Topping Up	42
Coolant, Draining	44
Charge Air Cooler, External Cleaning	44
Cooling System, Cleaning	45
Electrical System	47

Main switch	47
Electrical Connections	47
Battery	48
Storage	50
Technical Data	52
Engines	52
Lubrication System	53
Viscosity	53
Fuel System	54
Cooling System	55
Coolant, Mixing	56
Water Quality	56
Electrical System	57
Identification Numbers	57
Index	61

Foreword

Welcome!

Volvo Penta engines are designed to fulfill Volvo's core values; quality, safety and environmental care. After more than 100 years as an engine manufacturer, the Volvo Penta brand has also become a symbol of reliability, technical innovation, top-of-the-range performance and long service life. Volvo Penta engines are used all over the world, in different operating conditions.

Make sure to thoroughly read through the Operator's Manual regarding operating and maintenance. It contains the information you need to be able to operate and maintain the engine safely and correctly. Pay careful attention to the safety instructions included in the manual.

As the owner of a Volvo Penta engine, you become part of a worldwide network of dealers and service workshop that assist you with technical advice, service requirements and replacement parts. Contact your nearest authorized Volvo Penta dealer for assistance.

It is possible to buy additional literature about your Volvo Penta engine, e. g. the Service & Maintenance manual. More information on how to do this can be found at www.volvopenta.com.

Information about your closest Volvo Penta dealer and other useful news and information can be found at www.volvopenta.com and by following Volvo Penta on Facebook.

**V O L V O
P E N T A**

www.volvopenta.com



www.facebook.com/volvopenta

Safety Information

This chapter describes how safety precautions are presented in the manual and on the product. Read the chapter through very carefully before you start the engine or do any maintenance or service. It has to do with your safety; an incorrect operation can lead to personal injury and damage to products or property. It also gives you an introduction to the basic safety rules for using and looking after the engine.

If anything remains unclear or if you are unsure of something, contact your Volvo Penta dealer for assistance.

IMPORTANT:

Always follow local safety instructions and regulations.

Safety texts have the following order of priority:

DANGER!

Indicates a hazardous situation, which, if not avoided, result in death or serious injury.

WARNING!

Indicates a hazardous situation, which, if not avoided, could result in death or serious personal injury.

CAUTION!

Indicates a hazardous situation, which, if not avoided, could result in minor or moderate personal injury.

IMPORTANT:

Indicates a situation, which, if not avoided, could result in property damage.

NOTICE! Used to draw attention to important information that facilitates work or operations.



This symbol is may be used on the product to call your attention to the fact that this is safety information. Always read such information very carefully.

Make sure that warning and information symbols on the engine are clearly visible and legible. Replace symbols that have been damaged or have been painted over.



In some cases, this symbol is used on our products and refers to important information in the Operator's Manual.

Most chemicals such as engine and transmission oils, glycol, petrol and diesel oil and chemicals used in workshops such as degreasing agents, paint and solvents are harmful to health.

Carefully read the instructions on the product packaging! Always follow the safety regulations, such as the use of protective masks, goggles, gloves, etc. Make sure that other personnel are not exposed to substances that are hazardous to health. Ensure good ventilation.

Manage used and leftover chemicals in the prescribed manner.

Daily Checks

▲ WARNING!

Do not start the engine if there is reason to suspect fuel leaks or if there is explosive material nearby.

Make it a habit to give the engine and engine compartment a visual check before the engine is started and after operations, once the engine has stopped. This helps you to quickly discover fuel, coolant or oil leakages or any other abnormality that has occurred, or is about to occur.

Personal safety equipment

▲ CAUTION!

Always use appropriate safety equipment. Personal protective equipment does not eliminate the risk of injury but it will reduce the degree of injury if an accident does happen.

Some examples are ear protection, eye and face protection, protective footwear, personal protective equipment, head protection, protective clothing, gloves and respirators.

▲ WARNING!

Ensure that all machine guards and safety devices are in place and are functional.

▲ CAUTION!

Never use tools or products that show signs of damage.

Protect your eyes

▲ CAUTION!

Wear safety glasses.

Always wear safety glasses if there is a risk of splintering, sparks and spray from the electrolyte (so-called battery acid), or other chemicals. Your eyes are very delicate and damage can result in loss of sight!



P0024482

Protect your skin

⚠ CAUTION!

Risk of skin damage.

Avoid getting oil on your skin! Prolonged or repeated exposure to oil can dry out the skin. Thereafter, irritation, dryness and eczema and other skin problems may occur.

Use protective gloves and avoid oil-soaked clothes and rags. Wash regularly, especially before eating. Wear suitable protective creams to prevent skin from drying out and to facilitate cleaning.

Fire safety

⚠ WARNING!

Fire and Explosion Risk!

Accidental spark could ignite fuel vapors.

All fuels – as well as many lubricants and chemicals – are flammable. Do not allow open flames or sparks near them. **Smoking forbidden!** Hydrogen from the batteries is also very flammable and explosive in certain mixture with air.

Ensure that the workplace is well ventilated and take the necessary precautions before welding or grinding begins. Always ensure that there is a fire extinguisher close at hand in the work area.



P0024470

Spare parts — safety

⚠ WARNING!

Always use spare parts with the same quality as genuine Volvo Penta parts to minimize the risk of an explosion or fire.

Components in fuel systems and electrical systems on Volvo Penta engines are designed and manufactured to minimize the risk of explosions and fire, in accordance with applicable legal requirements.

Used oils, filters and chemicals etc.

⚠ WARNING!

Risk of fire.

Store fuel soaked rags and other flammable material so that there is no danger of them catching fire.

Oil-soaked rags can spontaneously ignite under certain circumstances.

IMPORTANT:

Used fuel and oil filters are environmentally hazardous waste and must be taken to an approved waste management facility for correct handling, as must any used lubricating oil, contaminated fuel, paint residue, solvents, degreasers and wash residue.

Prevent start of the engine

⚠ WARNING!

Immobilize the engine by turning off the power supply with the main switch(es) and lock it (them) in the off position before starting work. Place a warning notice at the main switch.

If the engine is equipped with BMS (Battery Management System), always disconnect both battery cables from the battery terminals.

Ventilation when running the engine

⚠ WARNING!

Only start the engine in a well-ventilated area. If operating the engine in a closed area ensure that there is exhaust ventilation leading out of the work area to remove exhaust gases and crankcase ventilation emissions.

The engine must not be operated in areas where there are explosive materials or stored gas.



P0024481

Rotating parts and hot surfaces

⚠ DANGER!

Working with or approaching a running engine is a safety risk. Watch out for rotating components and hot surfaces.

If the engine is in operation and operates another device, you must not, under any circumstances, staying close to the engine.

Work on running engines is strictly prohibited. There are however adjustments that require the engine to be run. Approaching a running engine is a safety risk. Loose clothing and long hair can get caught in the rotating parts; careless movements or a dropped tool can lead to serious personal injury.

Be careful to avoid hot surfaces (exhaust pipes, turbochargers, charge air manifolds, start elements etc.) and hot fluids in pipes and hoses on engines that are running or have just stopped. Re-install all protective covers that were removed during maintenance work before starting the engine.



P0024808

Information on the engine

IMPORTANT:

Make sure that all warning and information decals on the product are always visible. Replace decals which have been damaged or painted over.



P0024483



P0024688

Prohibition on use of start spray

⚠ WARNING!

Never use start spray or similar agents to start an engine. This may cause an explosion in the inlet manifold. Risk of personal injury.

Before start of engine

⚠ WARNING!

Never start the engine if there is reason to suspect fuel and/or gas leaks, or if there is explosive material nearby.

IMPORTANT:

Only start the engine with the air filter and protective caps fitted. Foreign objects in the inlet line could cause machine damage. Also make sure that no tools or other parts have been left next to the engine.

⚠ WARNING!

Never start the engine with the valve cover removed. There is a risk of personal injury. For engines with turbochargers, the rotating compressor turbine can in addition cause serious personal injuries.

Before any work on the electrical system

⚠ WARNING!

Always stop the engine first. Then disconnect the current at the main switches and any external power supply before working on the electrical system – to minimize the risk of electrical hazards.

IMPORTANT:

Never disconnect the current using the main switches when the engine is running or by disconnecting the battery cables. The alternator and electronics could be damaged.

Avoid damage to the engine control module and other electronics

IMPORTANT:

Switch off the main switch before connecting or disconnecting a connector.

Before welding work

IMPORTANT:

Before any work with electric weld can begin, the connection to all control units must be disconnected. After finished welding, re-connect the connection to all control units before connecting any battery cable.

Before any work on the cooling system

⚠ WARNING!

Stop the engine and let it cool before starting work on the cooling system. Hot fluids and hot surfaces can cause burns.

Hot coolant under pressure

⚠ CAUTION!

Hot coolant can cause burns. Avoid opening the filler cap for the coolant when the engine is still hot. Steam or hot coolant can spray out and system pressure is lost.

Open the filler cap slowly and release the pressure in the cooling system if the filler cap or valve must be opened – or if a plug or a coolant hose must be removed from a hot engine.

Hot oil under pressure

⚠ CAUTION!

Hot oil can cause burns. Avoid getting hot oil on the skin. Ensure that the lubrication system is not pressurized before starting any work. Never start or operate the engine without the oil filler cap is on. There is a risk that hot oil can spray out.

Refueling

⚠ WARNING!

There is always a risk of fire and explosion during refueling. Smoking is forbidden and the engine must be stopped.

Proper fuel quality

IMPORTANT:

Always use the fuel recommended by Volvo Penta. See *Technical Data* in Operator's Manual. Other fuel can damage the engine.

Wrong fuel quality can also lead to higher service costs.

⚠ WARNING!

Risk of personal injury.

Wrong fuel quality in a diesel engine can cause the fuel control mechanism to bind which can cause the engine to overspeed!

Legal requirements to use proper fuel

IMPORTANT:

To meet regulatory requirements for certified emission levels must always recommended fuel according to *Technical Data* in the Operator's Manual be used.



P0024477



P0024488

At any leak detection on the fuel system

⚠ WARNING!

Wear safety goggles!

Be extremely careful when searching for leaks in the fuel system high-pressure circuits. There is very high pressure in the jet from pipes and injectors. The fuel may penetrate the tissue and cause serious risk of blood infection (septicemia).

Handling of fuel pipes

IMPORTANT:

High pressure pipes for fuel must not be bent or straightened under any circumstances. Cracks may occur. Damaged pipes must be replaced.

Safe handling of batteries

⚠ WARNING!

Risk of fire and explosion. Never allow an open flame or electric sparks near the batteries.


A spark caused by an incorrectly connected battery can be enough for the battery to explode with serious injuries.

Do not touch the connections during start attempts. Sparking hazard! Do not lean over batteries.

Correct polarity of the batteries

IMPORTANT:

Make sure that the positive (+) and negative (-) battery cables are correctly connected to the corresponding battery terminals. Wrong connection may cause severe damage to electrical equipment.

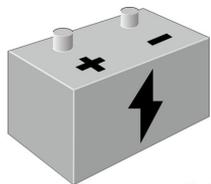

P0024468

Risks of electrolyte in batteries

⚠ WARNING!

Always wear protective goggles when charging or handling batteries.

Battery electrolyte is highly corrosive.

Rinse immediately with copious amounts of water if the electrolyte gets in your eyes. Search directly after the rinsing help by medical staff.

If it comes electrolyte to unprotected skin, wash immediately with soap and water.

Layout of the battery compartment

IMPORTANT:

Make sure the battery compartment is designed according to current safety standards.



P0024486

Cleaning the engine and components

IMPORTANT:

Never use a high pressure washer for cleaning of engine or engine components.

Cleanliness for sensitive components

IMPORTANT:

Observe meticulous cleanliness when handling system components.

Even minimal amounts of dirt could cause a breakdown.

Adjustment of the clutch

CAUTION!

Clutch adjustments must be carried out with the engine stopped.

Introduction

Check that you have received the correct operator's manual before continuing reading. If not, please contact your Volvo Penta dealer.

For engine designations, refer to *Engine*. The designation is stated on the engine plate, refer to *Technical Data, page 57*.

The illustrations in this book may cover several product types, which means that there may be slight differences between the illustrations and the purchased product. This does, however, not affect the validity of the information and/or instructions in the manual. Volvo Penta reserves the right to make alterations to specifications, design features, and illustrations without prior notice.

To retain the dependability and exhaust emission control originally built into all Volvo Penta engines, it is essential that the engines and receive periodic maintenance according to the maintenance instructions.

At service, software that affects the functionality described in this manual can be updated.

About this manual

This Operator's Manual contains the information required for the correct, safe operation and maintenance of your Volvo Penta engine. Read the Operator's manual carefully and learn to handle the engine and other equipment in a safe manner before you start the engine.

Warranty

Your new Volvo Penta engine is covered by a limited warranty, subject to the conditions compiled in the Warranty Information. AB Volvo Penta's liability is limited to the specification in the Warranty Information and Emission Control System Warranty Statement.

Read the information carefully, as soon as possible after delivery. It includes important information about service and maintenance; the owner is responsible for being familiar with checking and implementing these. Otherwise AB Volvo Penta may deny its warranty obligations in part or in full.

Contact your Volvo Penta dealer if you have not received information on how to access the Warranty Information or recived the Service Book.

Extended Coverage

With the Extended coverage options, customized for each engine's particular needs and working conditions, you can take total control of upcoming operational costs.

For more information regarding our different Services, visit volvopenta.com or contact your Volvo Penta representative.

Running in the engine

The engine must be run in during its first 10 operating hours, as follows:

Run the engine in normal operations. However, full load may not be applied other than for short periods.

Higher oil consumption is normal during the first 100–200 hours of operation. For this reason, check the oil level more frequently than the normal recommendation.

When a disengageable clutch is installed, it should be checked more carefully during the first days. Adjustments may be necessary to compensate bedding-in of the friction plates.

Fuel, oils and coolant

Only use the fuels and oils recommended in the Operator's Manual, other viscosity and quality may cause malfunctions, increased fuel consumption and possibly shorten the life of the engine.

Always change the oil, oil filters and fuel filters at the specified maintenance intervals.

Make sure to always use suitable and correctly mixed coolant.

If an unsuitable coolant has been used, or if the instructions for coolant mixture have not been followed, future warranty claims related to engine and accessories may be denied.

Maintenance and replacement parts

Volvo Penta engines are designed for maximum reliability and long life and built to withstand a demanding environment. The engines are also designed to have a minimal environmental impact. These qualities will be maintained through regular servicing and the use of spare parts with the same quality as genuine Volvo Penta parts. If reliable and purpose-built parts are not used, your safety, health, and the machine's function may be compromised. Volvo Penta has a world-wide network of authorized dealers.

The authorized dealers are Volvo Penta product specialists, and have the accessories, genuine parts, test equipment and special tools needed for high quality service and repair work. Always observe the maintenance intervals in the manual, the complete Service Protocol can be found at volvopenta.com. Remember to note the engine / transmission identification number when you **order service and spare parts**.

Excessive strain on a product and components

Volvo Penta products and components are not dimensioned for external loads. Never stand or step onto an engine, transmission or its components. Loads can bring about damage and the malfunction of a product or property.

Environmental care

Environmental care is a core value at Volvo Penta. Energy efficiency and low emissions are among the most important product related aspects and priority focus areas for Volvo Penta business. Several of the global challenges the world faces are directly or indirectly related to power industries and transports. We recognize that Volvo Penta is part of the environmental problems, but we are also convinced that we are a part of the solution.

Volvo Penta currently has a broad engine program in which great advances have been made in reducing exhaust emissions in the same time as the fuel consumption has been improved. Through regular maintenance, the Volvo Penta engines retain its low fuel consumption and low emissions. We hope that you will be keen to preserve these qualities.

Always follow the directions in the Operator's Manual regarding fuel grades, operation and maintenance to avoid unnecessary environmental impact. Contact your Volvo Penta dealer if you notice any changes such as increased fuel consumption or exhaust smoke.

Remember always to hand in environmental hazardous waste such as drained oil, coolant, old batteries, etc. for treatment at a recycling facility. Our united efforts can make a valuable contribution to the environment.

Certified engines

If you own an emission-certified engine used in an area where exhaust emissions are regulated by law, this places special demands on the care and maintenance you provide your engine.

NOTICE! Neglects or failure to follow the points listed here may invalidate the engine emission certificate. This means AB Volvo Penta can no longer guarantee engine conformity with the certified model. Volvo Penta is not responsible for damages or costs arising as a result of this.

- Certification means that an engine type has been checked and approved by the relevant authority. The engine manufacturer guarantees that all engines of the same type are equivalent to the certified engine.
- It is the responsibility of the operator/user to ensure that no intentional misuse of the engine takes place.
- Volvo Penta maintenance and service intervals must be complied with.
- Any case of malfunction must be rectified without delay.
- Only use genuine Volvo Penta parts or spare parts with the same quality as genuine Volvo Penta parts.
- Volvo Penta recommends that service to injection pumps, pump settings and injectors always are carried out by a qualified workshop.
- The engine must not be converted or modified in any way, except with accessories and service kits that Volvo Penta has approved for the engine.
- No installation changes to the exhaust pipe and engine air inlet ducts may be made.
- No warranty seals (where present on the product) may be broken by unauthorized persons.
- The general instructions in the Operator's Manual concerning operation, service and maintenance apply.

Volvo Penta Dealer Network

The Volvo Penta global network of authorized dealers is at your service. We strongly recommend that you take your product to an authorized Volvo Penta dealer for service and repair. They are specialists in Volvo Penta products and have the accessories, genuine Volvo Penta parts, the special tools and the latest service information for high quality service and repair work.

Dealer Locator Services

Locate the nearest Volvo Penta dealer through our dealer locator on www.volvopenta.com or download the dealer locator app to your smartphone.

Volvo Penta Action Service

Our global dealer network, your first line of contact, is backed up by Volvo Penta Action Service, a phone based breakdown and support service providing assistance 24 hours a day, every day of the year.

How it works

A dedicated operator will support you all the way through your case and keep you updated on status and progress.

Whenever on-site assistance or technical support is needed, the operator will put you in contact with the closest Volvo Penta dealer that can support your product.

Phone numbers

Find your Volvo Penta Action Service phone number and more information on www.volvopenta.com.




Presentation

Engines

This Operator's Manual covers the industrial engines: TAD841GE, TAD842GE, TAD843GE, TAD851GE, TAD852GE, TAD853GE.

All of the models are in-line, six-cylinder, direct injection industrial engines.

The engine are equipped with electronic management systems (EMS 2), turbochargers, charge air coolers, thermostatically controlled cooling systems and electronic speed control.

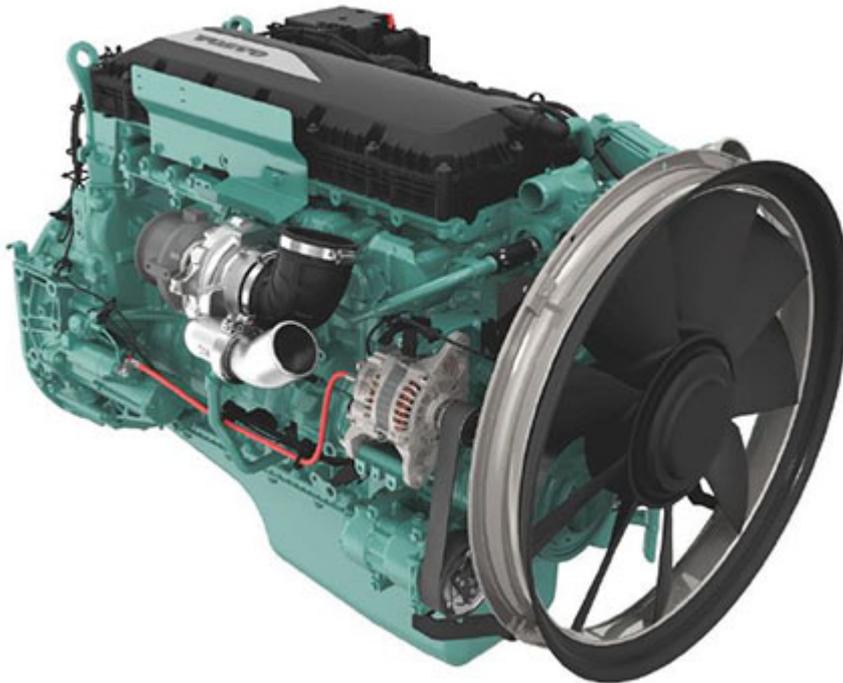

P0030391

EMS (Engine Management System)

EMS is an electronic system with CAN communication (Controller Area Network) for diesel engine control. The system has been developed by Volvo Penta and includes fuel regulation and diagnostic functions. The system consists of a control unit, injectors, a number of sensors that supply the control unit with information, and connectors for diagnostics and functional checks. The engine can be connected to a communication interface comprising a CAN link and a serial link.

Input/Output signals

The information from the sensors provides precise data about prevailing operating conditions and allows the processor in the control module to, among other things, calculate correct injection amount, injection timing and check the engine's condition.

Fuel regulation

The engine fuel requirement is analyzed up to 100 times per second. The engine injection volume and injection timing are controlled electronically via the fuel valves in the injectors. The control unit receives signals from sensors and monitors in order to determine when the fuel valve must open and close. This means the engine always receives the correct fuel volume under all operating conditions, which means lower fuel consumption and the lowest possible exhaust emission.

Diagnostic function

The purpose of the diagnostic function is to detect and locate any malfunctions in the EMS system, as well as to protect components from damage.

If a malfunction is detected, this is announced by warning lamps, a flashing diagnostic lamp or a text message on the instrument panel, depending on the equipment fitted. If a fault code is displayed it is used for guidance in any fault tracing. Fault codes can also be read by Volvo's VODIA tool at authorized Volvo Penta workshops.


If there is a serious malfunction, the engine will be shut down completely or the control unit may reduce power output (depending on the application). Fault codes are registered as an aid to fault tracing.

Starting

Make it a habit of giving the engine and engine room a visual check before starting. This will help you to discover quickly if anything abnormal has happened, or is about to happen. Also check that instruments and warning displays show normal values after you have started the engine.

⚠ WARNING!

Never use start spray or similar agents to start an engine. This may cause an explosion in the inlet manifold. Risk of personal injury.

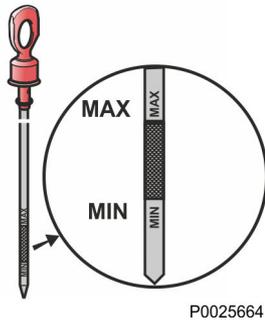

Before Starting

- Check that the oil level is between the MIN and MAX marks. Refer to *Oil level, checking and topping up*.
- Check the fuel pre-filter; refer to *Draining condensate, fuel system, page 38*.
- Check that no leakage of oil, fuel or coolant is present.
- Check the coolant level and that the radiator is not blocked externally. Refer to *Coolant Level, Checking and Topping Up, page 42* and *Charge Air Cooler, External Cleaning, page 44*.

⚠ WARNING!

Do not open the coolant filler cap when the engine is hot, except in emergencies, as this could cause serious personal injury. Steam or hot fluid could spray out.

- Turn the main switch on.

IMPORTANT:

Never break the circuit with the main switch while the engine is running.

Alternator and electronics could be damaged.

- Move the engine speed control to idle, and open the disengageable clutch/gearbox if installed.

Starting the Engine


The pre-heating time is adjusted to suit the engine temperature, and can last for up to 50 seconds both before and after starting.

The starter motor cranking time is maximized to 20 seconds. After that, the starter motor circuit is temporarily cut to protect the starter motor from overheating.

Starting in Extreme Cold

Certain preparations must be made to enable engine starting in extreme cold, and in some cases to make starting possible at all:

- Use a fuel that is approved for the prevailing temperature. This reduces the risk of paraffin wax precipitation in the fuel system.
- Use a synthetic engine oil of a viscosity recommended for the prevailing temperature to achieve satisfactory lubrication. Refer to *Viscosity, page 53*. Synthetic lubricants are able to handle a wider temperature range than mineral-based lubricants.
- Pre-heat the coolant with a separately installed electric engine heater. In extreme cases, a diesel-fired engine heater may be necessary. Ask your Volvo Penta dealer for advice.
- Make sure the cooling system is filled with a glycol mixture. Refer to *Maintenance, page 41*.
- The batteries must be in good condition. Cold weather reduces battery capacity. Increased battery capacity may be necessary.

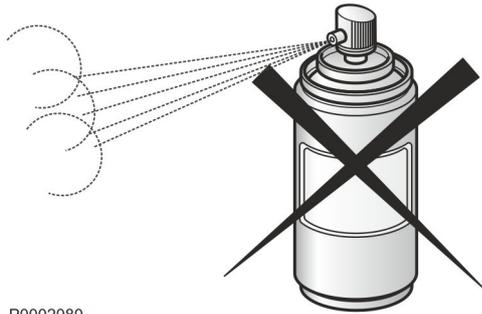

P0002080

Never Use Start Spray

⚠ WARNING!

Never use start spray or similar agents to start an engine. This may cause an explosion in the inlet manifold. Risk of personal injury.

Starting Using Auxiliary Batteries

⚠ WARNING!

Explosion hazard. Batteries contain and give off an explosive gas which is highly flammable and explosive. A short circuit, open flame or spark could cause a violent explosion. Ventilate well.

- 1 Check that the auxiliary batteries are connected (series or parallel) so that the rated voltage corresponds to the engine system voltage.
- 2 First connect the red (+) jumper cable to the auxiliary battery, then to the flat battery. Then connect the black (-) jumper cable to the auxiliary battery and to a location that is **somewhere away from the discharged battery**, e.g. the main switch negative terminal or the negative terminal on the starter motor.
- 3 Start the engine.

⚠ WARNING!

Do not touch the connections during the start attempt: Risk of arcing.
Do not bend over any of the batteries either.

- 4 Remove the cables in the reverse order.

IMPORTANT:

The ordinary cables to the standard batteries must not under any circumstances be loosened.

Operation

Correct operating technique is very important for both fuel economy, environmental protection and engine life. Always let the engine warm up to normal operating temperature before operating at full power.

Reading the Instruments

Check all instruments directly after starting, and then regularly during operation.

NOTICE! On engines in continuous operation, it is recommended that the lubrication oil level is checked at least every 24 hours. Refer to *Oil level, checking and topping up*.

Alarms

If the EMS receives abnormal signals from the engine, the control unit generates fault codes and alarms, in the form of lamps and audible warnings. This is done by means of CAN signals to the instrument.

More information about fault codes and fault tracing can be found in the chapter *Fault handling, page 27*.

Maneuvering

Operation at low load

Avoid long-term operation at idle or at low load. It takes a long time for the engine to reach working temperature, resulting in high viscosity of the oil and large clearances in the engine mechanics. In cold climate, it takes even longer.

The combustion temperature and cylinder pressure can become so low that an effective combustion cannot be ensured. At these conditions unburned fuel could dilute the lubricant oil. Because of the low cylinder pressure, the piston ring performance could be affected causing oil from the crankcase to pass the rings and go further out with the exhaust gases. This mixture of unburned fuel and oil in exhaust gases is referred to as "slobber". A new engine produces more "slobber" at low load compared to an engine with more hours of operation.

At low load, the pressure in the turbocharger is low and oil could seep past the turbocharger seals and mix with the air into the engine. The consequences can be carbon build-up on valves, piston crowns and the exhaust turbine, which could affect engine performance.

Both conditions can lead to increased oil consumption and eventually external oil leakage from joints in the exhaust system. For example, leakage could be seen at the exhaust manifold, before and after the turbo, around the muffler and in worse case even in the exhaust end pipe. Consequences could lead to clogged exhaust gas recirculation systems and exhaust aftertreatment systems.

Signs of oil leaking caused by "slobber" do not indicate an engine problem but indicates low load operation. To minimize the risk of malfunctions caused by operation at low load, follow these points as a complement to normal maintenance:

- Run in the engine as soon as possible.
- Load the engine so it reaches working temperature as soon as possible.
- For VE: Turn off the engine instead of running on idle for longer periods.
- For genset turn off the engine instead of running unloaded for longer periods.
- Avoid load levels below 20% as constant operation.
- If the engine is regularly tested without load, limit the duration of the operation to 5 minutes. Run the engine at full load for about 4 hours once a year, for the carbon deposits in the engine and exhaust system to burn off.
- If visible slobber has occurred, it can be burned off by running the engine on at least 30% load for about 40-60 minutes.

Engine Shutdown

Before Engine Shutdown

Let the engine run at high idle (1500 or 1800rpm) for a minimum of 5 minutes before the shutdown after normal use. Normal use is defined as minimum 50% load. After use with less than 50% load, high idle for approximately 3 minutes is sufficient. This allows engine temperature equalization and prevents boiling once stopped and also allows the turbochargers to cool down. This contributes to long, fault-free service life.

NOTICE! Do not turn off the main switch within 30 seconds after turning off the ignition. This is in order to save engine data to the engine control unit.

Stop the Engine

Auxiliary Stop

For location of the extra stop, refer to *Maintenance, page 32*.

WARNING!

Working with or approaching a running engine is a safety risk. Watch out for rotating components and hot surfaces.



P0025697

After Engine Shutdown

- 1 Check the engine and engine compartment for leaks.
- 2 Turn off the main switches before any long stoppage.
- 3 Carry out maintenance in accordance with the schedule.

For longer breaks in operation

During longer breaks in operation, it is recommended that the engine is warmed up at least once every two weeks. This prevents corrosion in the engine.

If you expect the engine to be unused for two months or more, it should be conserved. Refer to *Storage, page 50*.

IMPORTANT:

If there is a risk of freezing, the coolant in the cooling system must have adequate antifreeze protection.

Refer to *Maintenance, page 41*.

IMPORTANT:

A poorly charged battery can freeze and burst.

Refer to *Battery, page 48*.

Fault handling

Despite regular service in accordance with the planned maintenance schedule and perfect operating conditions, faults may occur that must be remedied before operations continue. This chapter describes the diagnostics function.

Diagnostic Function

The purpose of the diagnostic function is to monitor, control and protect the engine and its surrounding system and components from damage, as well as to ensure a minimal environmental impact.

If a malfunction is detected the diagnostic function informs of the occurred fault in the form of a fault code. The fault code provides guidance when fault tracing. All fault codes and fault messages can be found in the *Fault Code Register*.

The operator is warned that there is a malfunction via the instruments. Depending on the instrumentation in use, the fault message is shown in various ways. Fault codes can also be read out by the Volvo Penta diagnostic tool.

Depending on the severity of the fault, the diagnostic function will take various actions to protect the engine and limit emissions (e.g. torque derate, idle speed only, engine shut down etc.)

Erasing fault codes

The memory of the diagnostic function is reset when the power to the engine is disconnected. When the power is switched on again, the diagnostic function will check if there are any malfunctions in the system. If so a new fault codes is registered.

If a malfunction has not been corrected it will be registered once again and has to be acknowledged again.

Fault Tracing

A number of symptoms and possible causes of engine malfunctions are described in the table below. Always contact your Volvo Penta dealer if any problems occur which you cannot solve by yourself.

NOTICE! Read through the safety advice for care and maintenance work in the chapter *Safety precautions for maintenance and service operations* before you start any work.

Symptoms and possible causes	
The diagnosis button lamp flashes	Please refer to <i>Alarm handling</i>
Engine cannot be stopped	2, 5
Starter motor does not rotate	1, 2, 3, 4, 5, 6, 7, 23
Starter motor rotates slowly	1, 2
Starter motor rotates normally but the engine does not start	8, 9, 10, 11,
Engine starts but stops again	8, 9, 10, 11, 12
Engine does not reach correct operating speed at full throttle	9, 10, 11, 12, 20, 23, 24
Engine runs roughly	10, 11
High fuel consumption	12, 14, 23
Black exhaust smoke	12
Blue or white exhaust smoke	14, 21
Too low lubrication oil pressure	15
Excessive coolant temperature	16, 17, 18, 19
Too low coolant temperature	19
No, or poor charge	2, 22

- 1 Discharged batteries
- 2 Poor contact/open circuit in electrical wiring
- 3 Main switch turned of
- 4 Main fuse faulty
- 5 Faulty ignition lock
- 6 Faulty main relay
- 7 Faulty starter motor-/solenoid
- 8 No fuel:
 - fuel cocks closed
 - fuel tank empty/wrong tank connected
- 9 Blocked fuel fine-filter/pre-filter (due to contaminations, or stratification in the fuel at low temperature)
- 10 Air in the fuel system
- 11 Water/contamination in fuel
- 12 Insufficient air supply to the engine:
 - blocked air filter
 - air leakage between the turbo and the engine intake manifold
 - dirty compressor part in the turbocharger
 - faulty turbo compressor
 - poor engine compartment ventilation
- 13 Coolant temperature too high
- 14 Coolant temperature too low
- 15 Oil level too low
- 16 Coolant level too low
- 17 Air in coolant system
- 18 Faulty circulating pump
- 19 Defective thermostat
- 20 Blocked charge air cooler
- 21 Oil level too high
- 22 Alternator drive belt slips
- 23 High back pressure in the exhaust system
- 24 Break in "Pot+" cable to throttle

Fault Code Register

Fault codes, engine

SPN	Component	FMI
20	Coolant Water Pressure	1, 3, 5, 18
51	Engine Throttle position (cold)	3, 5, 7, 12, 13
91	Accelerator Pedal position	0, 9, 19
94	Fuel Delivery Pressure <i>Maintenance, page 38</i>	0, 3, 5, 18
97	Water in fuel indicator <i>Draining condensate, fuel system, page 38</i>	0, 4
98	Engine Oil Level <i>Oil level, checking and topping up, page 35</i>	1, 4, 5, 18
99	Engine Oil Filter Differential Pressure	0
100	Engine Oil Pressure <i>Oil level, checking and topping up, page 35</i>	1, 3, 4, 5, 18
101	Crankcase pressure	0, 3, 5
102	Boost pressure	0, 3, 4, 5, 16
103	Turbo Speed	9
105	Boost temperature	0, 4, 5, 16
107	Air filter pressure	0, 3, 4, 5, 12
108	Ambient air pressure	5
110	Coolant Temperature <i>Coolant Level, Checking and Topping Up, page 42</i>	0, 4, 5, 16
111	Coolant Level <i>Coolant Level, Checking and Topping Up, page 42</i>	1, 3, 4, 5, 18
131	Exhaust back pressure	3, 5, 12
157	Rail pressure	0, 1, 5, 7, 12, 14, 16
158	ECU battery potential <i>Battery, Charging</i>	0, 1, 2
172	Ambient Air Temperature Sensor	4, 5
173	Exhaust gas temperature	0, 16
175	Engine Oil Temperature <i>Oil level, checking and topping up, page 35</i>	0, 3, 4, 5, 16
190	Engine Speed	0, 16
626	Preheat relay	3, 4, 5
628	Program Memory	2
636	Camshaft sensor	7, 8, 9
637	Crankshaft sensor	2, 8, 9
639	J1939 Network #1 Primary Vehicle Network	2
641	VGT Actuator on CAN	0, 2, 3, 5, 6, 9, 11, 17
647	Engine Fan Driver	3, 4, 5
651	Fuel Injector, Cylinder #1	3, 4, 5
652	Fuel Injector, Cylinder #2	3, 4, 5
653	Fuel Injector, Cylinder #3	3, 4, 5
654	Fuel Injector, Cylinder #4	3, 4, 5
655	Fuel Injector, Cylinder #5	3, 4, 5

SPN	Component	FMI
656	Fuel Injector, Cylinder #6	3, 4, 5
677	Starter motor relay	3, 4, 5, 6
679	Fuel Pressure Regulator	3, 4, 5, 7
729	Preheater	5, 6, 7, 12
970	Engine stop switch	3, 4, 5, 11, 14
1072	Volvo Compression Brake (VCB) # 1	3, 4, 5
1073	Volvo Compression Brake (VCB)	3, 4, 5
1136	ECU temperature high	3, 4, 5
1188	Wastegate Valve	3, 4, 5
1239	Rail pressure system	14
1485	ECM Main Relay	7
1347	Rail Fuel Temperature	7
1368	Rail Fuel Temperature	2, 4, 5, 12, 16
1639	Fan speed	3
1668	J1939 Network #4 (engine subnet)	2
2017	Lost Communication (Source Address 17)	9
2036	Lost Communication (Source Address 36)	9
3241	Exhaust gas temperature	19
3464	Engine throttle actuator (cold) Engine Throttle Actuator	3, 4, 5, 7, 10, 12
3509	Sensor Supply Voltage #1 (+5 V DC)	3, 4
3510	Sensor Supply Voltage #2 (+5V DC)	3, 4
3511	Sensor Supply Voltage #3 (+5V DC)	3, 4
520244	Fuel Pressure Relief Valve	3, 4, 5, 7, 12
520245	Rail pressure system	0, 1, 16, 18
520335	ECU battery potential	5
520416	Lost communication with reductant control module on engine subnet	9
520566	Intake supercharger actuator	3, 4, 5, 7
520570	Engine Oil Pressure Before Filter	3, 4, 5, 11
520688	Aftertreatment Exhaust Temperature - Dry	0, 3, 4, 5, 16
520691	Torque Speed Control 1 Received With Errors (Counter or Checksum)	14
520692	Intake Supercharger Sense	3, 4, 5
520750	High-pressure leakage	15
520751		16
520752		3, 4, 5

Maintenance

This chapter describes the most common maintenance items. Refer to *Maintenance Schedule* for service intervals. When ordering service or spare parts, always specify the engine and transmission identification number. Refer to *Technical Data*, page 57.

NOTICE! More information on how to perform service and maintenance can be found in the Service and Maintenance handbook. Information on how to purchase the Service and Maintenance handbook can be found at www.volvopenta.com.


⚠ CAUTION!

Read through the safety advice before starting any work.

⚠ WARNING!

Care and maintenance work should be done with the engine stopped unless otherwise specified. Stop the engine before opening or removing the engine hatch/hood. Make it impossible to start the engine by removing the start key and cutting the system voltage with the main switches.

Orientation

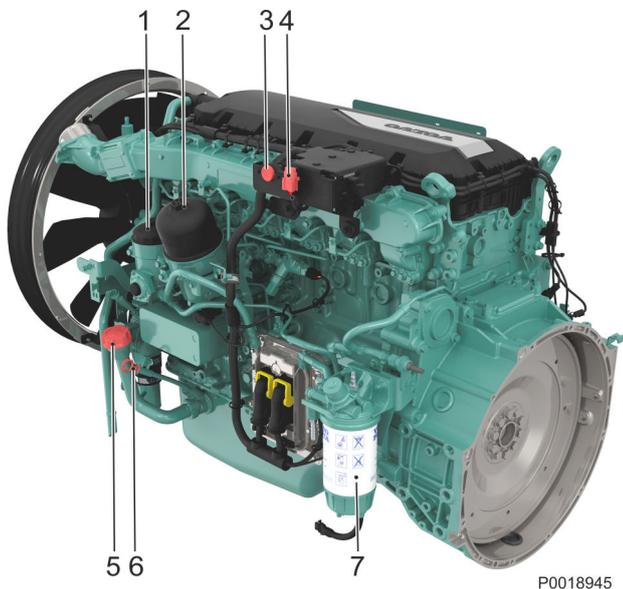

- 1 Fuel Filter
- 2 Oil filter
- 3 Auxiliary stop
- 4 Fuses
- 5 Oil filler cap, engine
- 6 Oil dipstick
- 7 Fuel pre-filter

Engine, General

General inspection

Make it a habit to give the engine and engine compartment a visual inspection before starting the engine and after operation once the engine has stopped. This will help you to discover quickly if anything abnormal has happened, or is about to happen.

Look especially carefully at oil, fuel and coolant leakage, loose bolts, worn or poorly tensioned drive belts, loose connections, damaged hoses and electrical cables. This inspection only takes a few minutes and can prevent serious malfunctions and expensive repairs.

WARNING!

Risk of fire.

Remove all accumulations of fuel, oil and grease when detected on the engine or in the engine room.

WARNING!

If an oil, fuel or coolant leak is detected, the cause must be investigated and the fault rectified before the engine is started.

IMPORTANT:

Washing with a power washer: Never aim the water jet at radiators, charge air cooler, seals, rubber hoses or electrical components.

Drive Belt, Check and Replace

CAUTION!

Pinch hazard. Keep fingers clear.

IMPORTANT:


Always change a belt that is oily, worn or damaged.

Check

Check the drive belt after operation, when the belt is hot. It should be possible to depress the drive belt about 3-4 mm (0.12-0.16") between the pulleys. The drive belt has an automatic belt tensioner and therefore does **not** need to be adjusted.


Replacement

- 1 Remove the right belt guard.

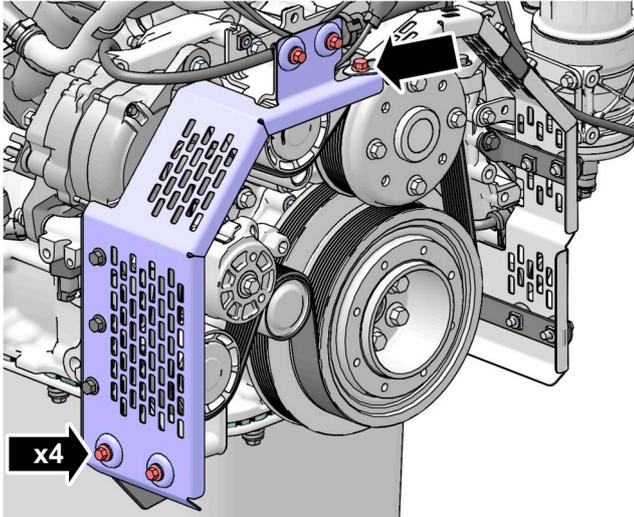


P0019257

- 2 Undo the belt tensioner and restrain it with a mandrel.
Remove the old drive belt.

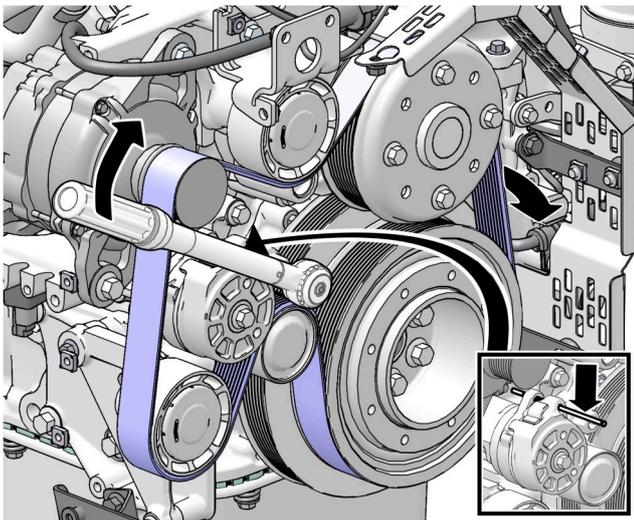

P0019255

- 3 Fit the new drive belt.
- 4 Remove the mandrel restraining the belt tensioner.
- 5 Re-install the belt guards.
- 6 Check that the belts are correctly aligned in their grooves and are correctly tensioned. It should be possible to depress the drive belt about 3-4 mm (0.12–0.16") between the pulleys.

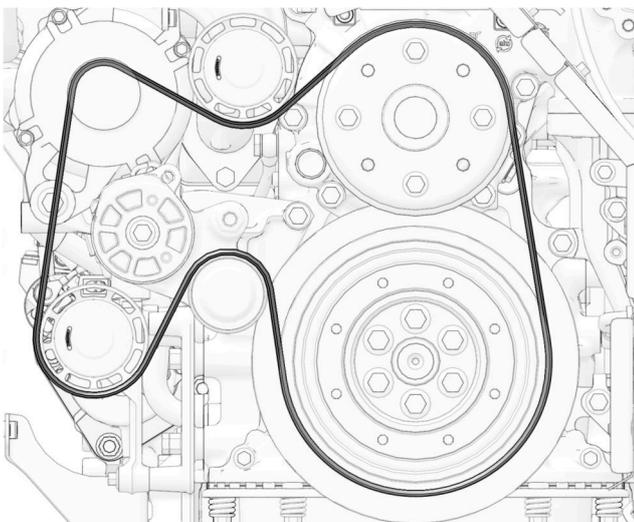

P0019256

Lubrication System



P0002089

Volvo Penta only recommends the use of genuine Volvo Penta oils with the correct VDS (Volvo Drain Specification) standards.


Genuine Volvo Penta oils are extensively tested and quality assured by Volvo Penta to optimize performance, reduce fuel consumption and maximize the life of the engine.

More detailed information regarding oil quality, viscosity and oil drain interval, refer to chapter *Lubrication System*.

Oil level, checking and topping up

⚠ WARNING!

Working with or approaching a running engine is a safety risk. Watch out for rotating components and hot surfaces.

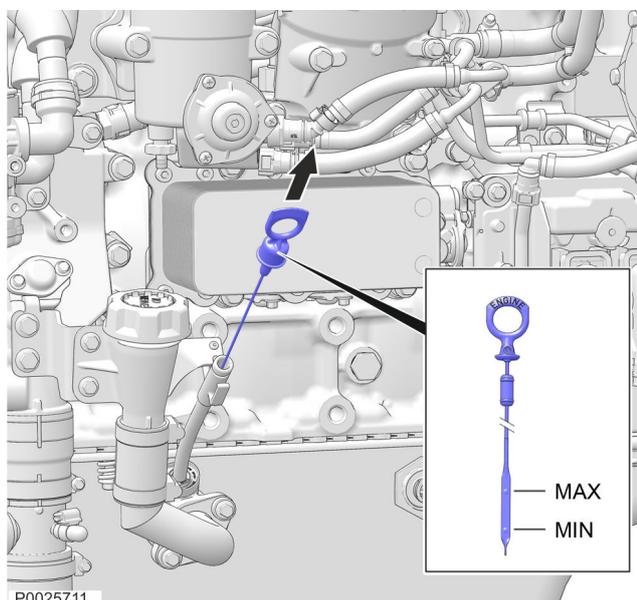

P0025711

- When checking the oil level the vehicle should stand on level ground.
- The oil level is to be checked when the engine is stopped. Wait approximately 3 minutes before reading off the oil level for a warm engine, more time will be needed for engines that do not have a warm oil temperature, up to 60 minutes can be needed. The waiting time is needed so that the oil has time to run down into the oil pan.
- Only use a recommended quality and viscosity of oil; refer to *Oil recommendations*.
- Make sure that the oil level is between the MIN and MAX marks. Do **not** fill above the maximum oil level.

Depending on installation and application, some variants are equipped with digital oil level display, this function should be considered to be a complement to the engine oil dipstick and not a replacement.

The physical engine oil dipstick should always be consulted when filling up new oil in the engine, to not risk overfilling the system.


Oil Filter, Replace

⚠ WARNING!

Hot oil and hot surfaces can cause burns.

NOTICE!

Always follow the recommended oil change intervals. Always replace the oil filter at the same time as the oil change.

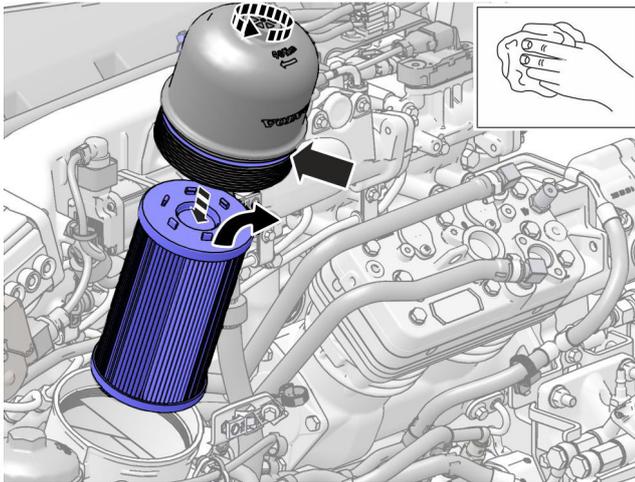

Removal


- 1 Drain the oil according to the instructions in *Engine Oil, Replace, page 37*.

NOTICE! Place a collection vessel underneath the filter to avoid oil spillage.

- 2 Clean around the oil filter.
- 3 Carefully remove the filter cover together with the filter
- 4 Remove the O-ring and filter from the cover.
- 5 Let the oil drip off into a collection vessel.

Installation

- 1 Lubricate the new O-ring and the gasket of the new filter before installation.
- 2 Install the new filter and new O-ring in the filter cover. Make sure the filter is correct installed in the cover.
- 3 Install the filter cover and filter in the bracket. Tighten the cover to: 40 Nm (29.5 lbf.ft.)
- 4 Fill with required volume of oil; refer to *Engine Oil, Replace, page 37*.
- 5 Start the engine and check that there is no oil leakage from the oil filter or drain nipple.
- 6 Switch the engine off and check the oil level after a few minutes. Top up with oil as necessary.

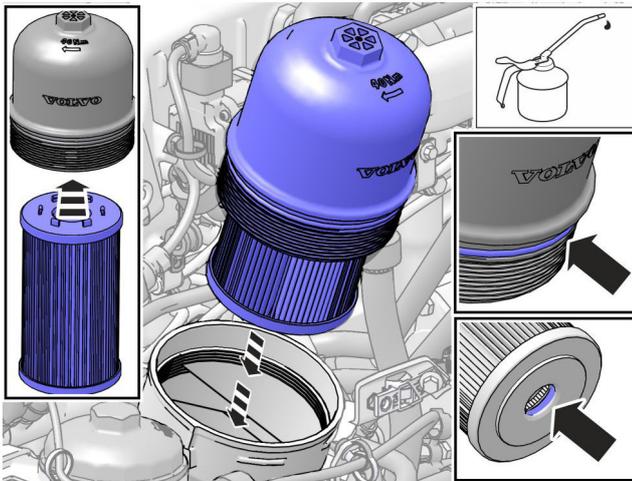


P0025714

Engine Oil, Replace

⚠ WARNING!

Hot oil and hot surfaces can cause burns.

NOTICE! Always follow the recommended oil change interval and always change the oil filter in connection with oil changes.

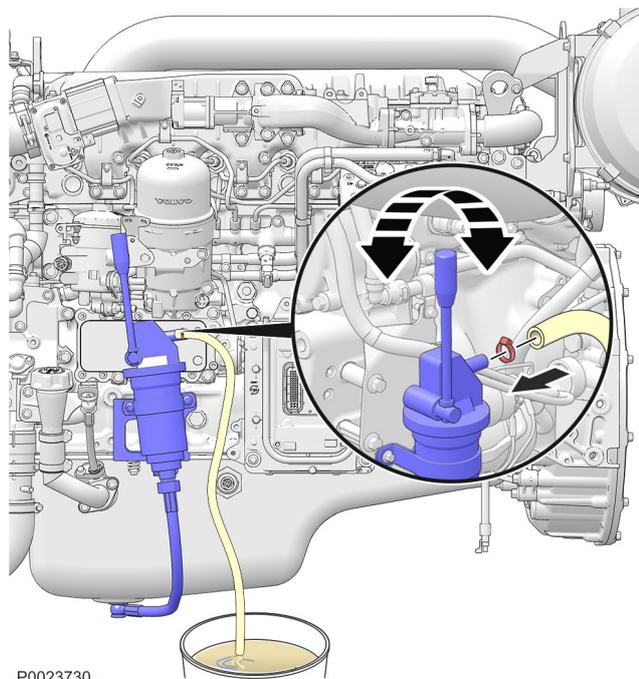

- 1 Run the engine until warm.
- 2 Remove the drain plug. Drain the oil.

NOTICE! Collect the old oil and old filters and hand them to a re-cycling station.
- 3 Install the drain plug with a new gasket.
- 4 Change the oil filter, refer to *Oil Filter, Replace, page 36*.
- 5 Fill oil to the correct level, refer to *Oil level, checking and topping up, page 35*.

IMPORTANT:

Do not fill above the MAX level.

- 6 Start the engine and let it idle. Check that the oil pressure is normal.
- 7 Stop the engine. Check that there is no oil leakage around the filters. Check the oil level and top up with oil as necessary. Refer to *Oil level, checking and topping up, page 35*.



P0002101

Fuel System


⚠ WARNING!

Fire hazard. When carrying out work on the fuel system make sure the engine is cold. A fuel spill onto a hot surface or an electrical component can cause a fire. Store fuel soaked rags so that they cannot cause fire.

IMPORTANT:

Always observe the greatest cleanliness during refueling and work on the fuel system. Only use the grades of fuel recommended in the fuel specification.

Draining condensate, fuel system

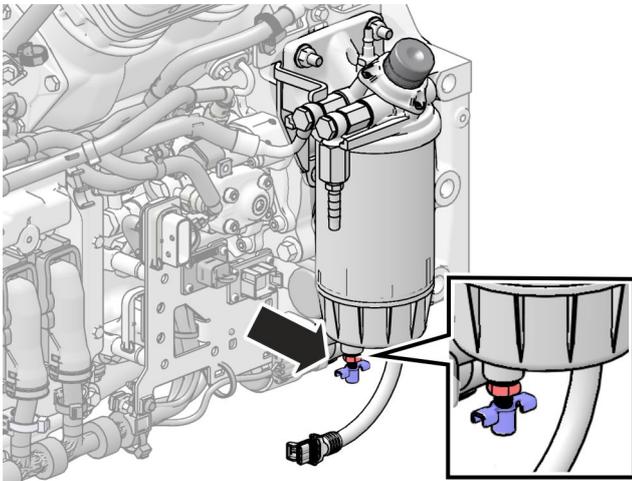

- 1 Stop the engine and close the fuel tap.
- 2 Put a collection vessel under the fuel pre-filter to collect the condensate and fuel.
- 3 Open the drain nipple at the bottom of the water separator.
- 4 Drain the water contained in the water separator into the collection vessel.

NOTICE! Do not drain the water separator completely.

- 5 Tighten the drain nipple and open the fuel tap.
- 6 Start the engine and check there is no fuel leakage from water separator.

Fuel Filter, Replace

IMPORTANT:



Risk of material damage.

The wrong type of fuel filter may damage the fuel injection circuit.

Use only a fuel filter approved by the manufacturer.

IMPORTANT:

Take great care to keep fuel system unions clean. Even minimal amounts of dirt can cause engine breakdown.

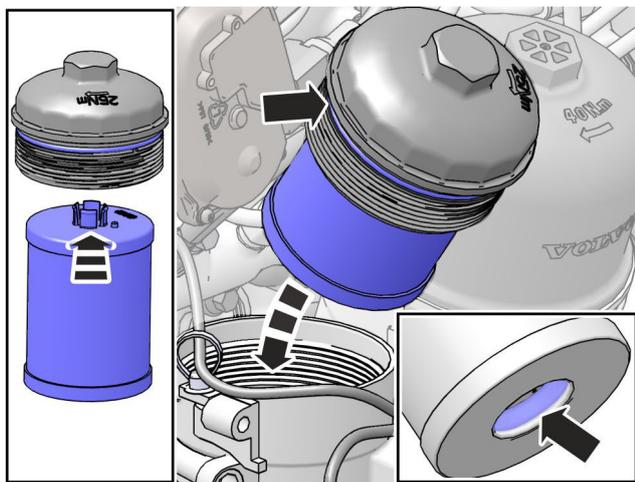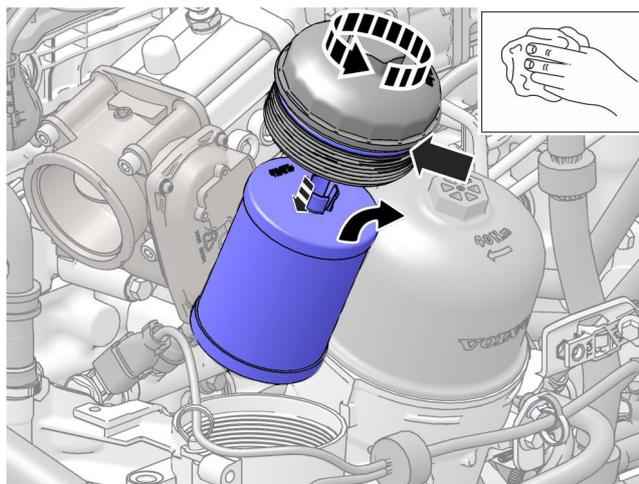

P0025715

Removal

- 1 Clean around the filter cover and housing.
- 2 Carefully remove the fuel filter cover and filter.

NOTICE! Be prepared to gather up fluid. The filter is still full of fuel and there is a risk of spillage when the cover is removed.

- 3 Remove the O-ring and filter.
Let the fuel drip off into a collection vessel.

Installation


- 1 If the new filter housing is completely empty, lubricate with diesel around the inner section of the filter sealing surface.
- 2 Lubricate the O-ring with diesel before installing the filter cover.
- 3 Install the filter in the filter cover. Make sure the filter seats properly in the cover.
- 4 Install the filter cover and filter in the bracket. Carefully screw in the cover and check that the O-ring does not get twisted. Re-lubricate the seal as necessary.
Tighten the cover to: 25 Nm (18.4 lbf. ft.)
- 5 Bleed the fuel system according to *Maintenance, page 40*.
- 6 Start and warm up the engine. Check that no leakage occurs.

Fuel Pre-filter, Replace

CAUTION!

Always use protective gloves for work including contact with oil, fuel etc.

NOTICE! Put a collection vessel under the fuel filter to collect the condensate and fuel. Store the used filter in a suitable container.

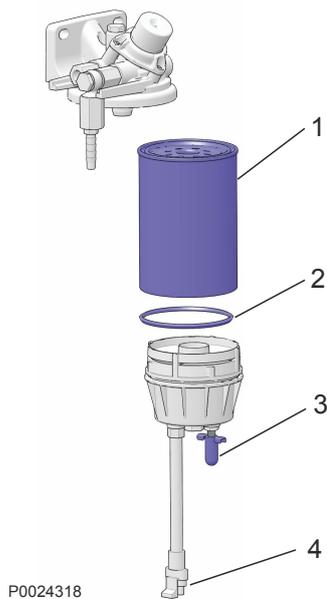

Removal

- 1 Loosen the connector (4) to the water trap sensor.
- 2 Clean thoroughly around the pre-fuel filter and water separator.
- 3 Open the drain nipple (3) in the base of the fuel prefilter and drain the filter.
- 4 Tighten the drain nipple again.
- 5 Remove the fuel pre-filter (1) and seal together with the lower section of the water separator.
- 6 Remove the water separator and O-ring.

NOTICE! Put the used filter in a suitable container.

- 7 Clean the lower section of the water separator and the contact surfaces.

Installing

- 1 Clean the seal surfaces thoroughly and lubricate the gasket with diesel.
- 2 Lubricate a new O-ring (2) with diesel and install the lower part of the water separator to the new filter.
- 3 Screw the filter onto the filter bracket by hand until the rubber seal bottoms on the mating surface. Then tighten a further 1/2–2/3 turns.
- 4 Connect the cable from the water trap sensor.
- 5 Open fuel taps and purge the system, refer to *Fuel system, bleeding*.
- 6 Start the engine and check that no leakage occurs.



P0013077

Cooling System

The cooling system ensures that the engine operates at the correct temperature. It is a closed system that should always be filled with a coolant mixture.

IMPORTANT:

Coolant of a suitable chemical composition must be used all year round to protect the engine against internal corrosion, cavitation and freeze bursting. This even applies when there is no risk for freeze damage, to make sure the engine always has a complete corrosion protection.

Therefore, the use of anti-corrosion agents alone, or water alone as a coolant, is not permitted in Volvo Penta engines.

The coolant must be based on Organic Acid Technology (OAT). Using an improper coolant or mixing with another coolant will rapidly reduce the performance and lifetime of the engine. Material incompatibility can lead to leakages, which - in the worst case - can cause engine breakdown.

Volvo Penta strongly recommend the use of our own coolants, "Volvo Penta Coolant VCS Ready Mixed" or the concentrate "Volvo Penta Coolant VCS", which ensure the protection of the cooling system components from corrosion, ageing, swelling and cracking, thereby ensuring optimal engine lifetime.

Over time the corrosion protection additives become less effective, and consequently the coolant must be changed at regular intervals to maintain sufficient protection of the engine. The latest Service Protocol that specifies service intervals can be found at volvopenta.com.

Coolant, Mixing

It is extremely important that the system is filled with the correct coolant concentration; refer to *Coolant, Mixing, page 56*.

The coolant should be mixed with distilled, deionized water. For Volvo Penta specified water requirements; refer to *Coolant, Mixing, page 56*.

NOTICE! If water quality can not be guaranteed, use ready mixed coolant.

Coolant Level, Checking and Topping Up

⚠ WARNING!


Do not open the coolant filler cap when the engine is hot, except in emergencies, as this could cause serious personal injury. Steam or hot fluid could spray out.

Coolant filling must be performed with the engine stopped. Check the coolant level daily before starting.

IMPORTANT:

Only use coolant recommended by Volvo Penta. Top up with the same type of coolant as already used in the system. Different types of coolant must not be mixed.


- 1 Only open the filler cap (1). Do not open the pressure cap.
- 2 Check that the coolant level is above the MIN mark on the expansion tank.
- 3 Top up with coolant as required, so that the level is between the MIN and MAX marks. Fill slowly, to allow air to flow out.

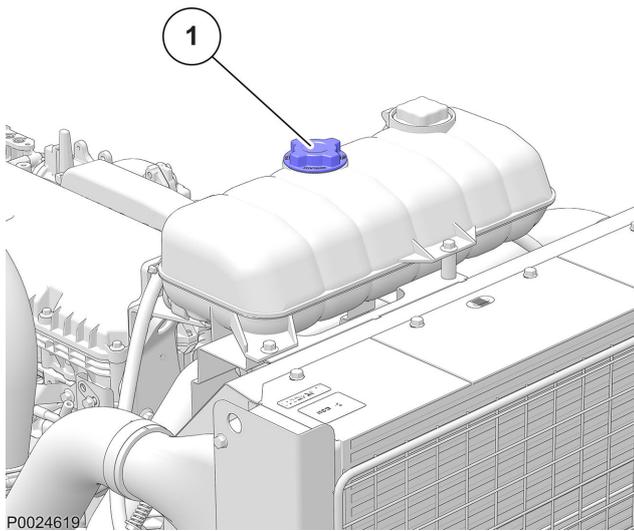

P0024619

Refill of empty system

NOTICE! Mix the correct amount of coolant in advance to ensure that the cooling system is completely filled. Refer to *Technical Data*, page 55 for the correct coolant volume.

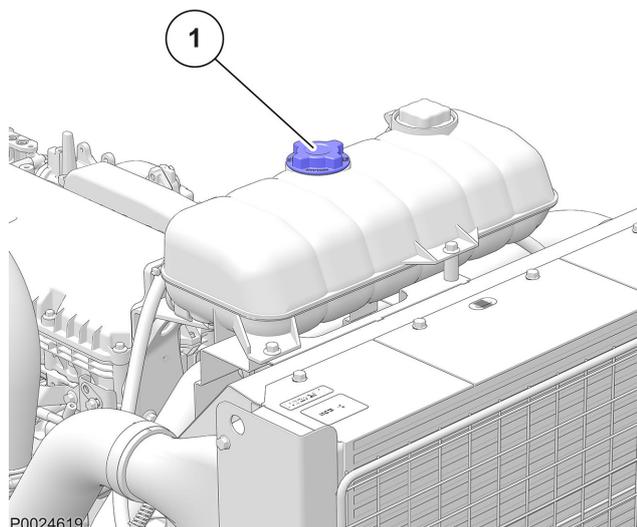

- 1 Check that all drain points are closed.
- 2 Only open the filler cap (1). Do not open the pressure cap.
- 3 Fill with coolant, so that the level is between the MIN and MAX marks. Fill slowly, to allow air to flow out.
- 4 Start the engine when the cooling system has been completely filled and bled. Open any bleeding nipples a short while after starting, to allow trapped air to escape.
If a heating unit is connected to the engine cooling system, the heat control valve should be opened and the installation vented during filling.
- 5 Run the engine at idle a while. Increase engine speed to 1600-1700 rpm (VE) over three minutes. For genset engines run at 1500 or 1800 rpm. Check the coolant level.
- 6 Start the engine and run it until it reaches operating temperature (thermostat open). Check the coolant level again, top up as necessary.
- 7 Carry out a follow-up check of the coolant level after approx 1 hour's operation.


Coolant, Draining

⚠ WARNING!

Do not open the coolant filler cap when the engine is hot, except in emergencies, as this could cause serious personal injury. Steam or hot fluid could spray out.

IMPORTANT:

The coolant contains corrosion-inhibiting additives. Never drain the engine cooling system on engines, which are to be put in storage.

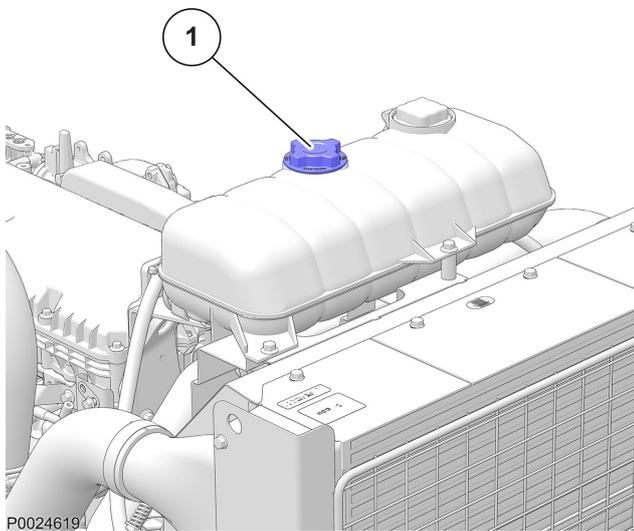


- 1 Stop the engine.
- 2 Remove the filler cap (1). Do not open the pressure cap.
- 3 Open all drain points. Drain the coolant from the radiator and engine block, using the drain hose. The drain nipples are situated under the radiator on the right side of the engine block.
- 4 Check that all coolant drains out. Deposits may be found inside the drain plug/tap, and need to be cleared away. There is otherwise a risk that coolant could remain and cause damage due to freezing. Check whether the installation has any further taps or plugs at the lowest points of the cooling water pipes.
- 5 Shut any taps and check that the spring-loaded covers on the nipples close completely. Install the rubber plugs.

Charge Air Cooler, External Cleaning

NOTICE! Regular inspect the charge air cooler visually.

- 1 Cover the engine before cleaning. The charged air cooler must be cold.
- 2 Clean with high pressure wash or compressed air. Be careful not to damage the radiator fins. If detergent is used, make sure that it is not corrosive to aluminum.

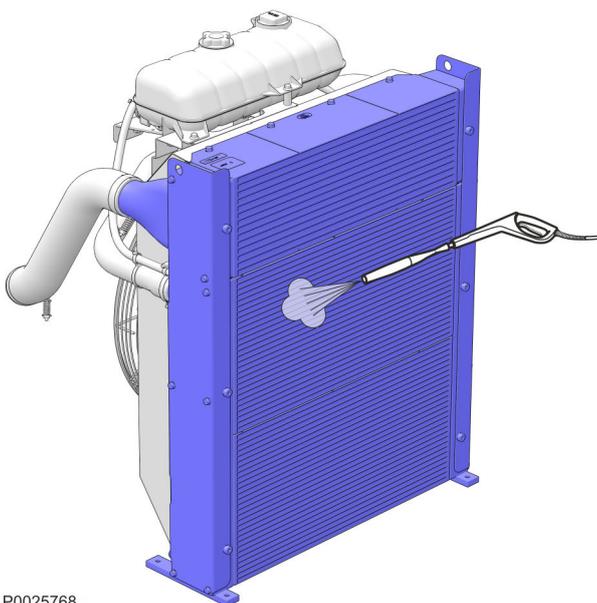

P0025768

Cooling System, Cleaning

WARNING!

All coolant is hazardous and harmful to the environment. Do not consume. Coolant is flammable.

IMPORTANT:

Never clean the cooling system if there is any risk of freezing, since the cleaning solution does not have any antifreeze properties.

IMPORTANT:

It is extremely important that the correct concentration and volume of coolant is added to the system. Mix in a separate clean vessel before filling the cooling system. Make sure that the liquids mix.

IMPORTANT:

Always follow local safety instructions and regulations.

Cooling performance is reduced by deposits in the radiator and cooling galleries. The cooling system should be cleaned out when the coolant is changed.

- 1 Empty the cooling system. Refer to *Coolant, Draining, page 44*.
- 2 Put a hose into the expansion tank filling hole and flush with clean water, as specified by Volvo Penta—refer to section Water quality in *Technical Data, page 55* until the water draining out is completely clear.
- 3 If there should still be some contamination left after flushing for a long time, cleaning can be done with coolant. Otherwise, continue as in item 8 below.
- 4 Fill the cooling system with 15-20 % mixture of concentrated coolant. Use only Volvo Penta recommended concentrated coolant mixed with clean water.
- 5 Drain the coolant after 1-2 days of operation. Remove the filler cap and possibly the lower radiator hose to increase the speed of emptying. To prevent suspended material from settling back in the system emptying should be done rapidly, within the space of 10 minutes, when the engine has not been standing still for a long time.
- 6 Flush the system immediately and thoroughly with clean hot water to prevent dirt from settling in the inner areas. Flush until the water that runs out is completely clean. Make sure that any heater controls are set to full heating during emptying.
- 7 If contamination should still be left after a long period of flushing, cleanout using Volvo Penta radiator cleaner, followed by finishing-off with Volvo Penta neutralizer. Carefully follow the instructions on the package. Otherwise, continue as in item 8 below.
- 8 When the cooling system is completely free from contamination, close the drain taps and plugs.
- 9 Fill up with Volvo Penta recommended coolant, following the instructions in the chapters entitled *Maintenance, page 41* and *Coolant Level, Checking and Topping Up, page 42*.

Electrical System

The engine is equipped with a single-pole electrical system and an alternator. System voltage is 24V.

⚠ WARNING!

Always stop the engine and break the current using the main switches before working on the engine.


Main switch

IMPORTANT:

Never disconnect the current using the main switches when the engine is running or by disconnecting the battery cables.

The alternator and electronics could be damaged.

The main switches must never be switched off before the engine has stopped. If the circuit between the alternator and the battery is disconnected when the engine is running, the alternator and electronics may be damaged. For the same reason, the charging circuits must never be re-connected with the engine running.

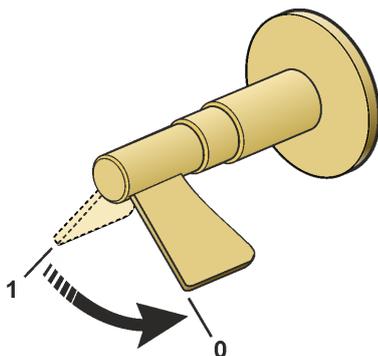

P0002576

Fuses

The engine is equipped with a fuse (15 A) which cuts the current if overloaded.

The engine stops if the fuse trips. If the fuse trips frequently, an authorized Volvo Penta workshop should be contacted to investigate the cause of the overload.

Refer to *Maintenance*, page 32 for location of the fuses.

Electrical Connections

Check that electrical connections are dry, free from oxide, and that they are securely tightened.



P0002107

Battery

⚠ WARNING!

Risk of fire and explosion. Never allow an open flame or electric sparks near the batteries.

⚠ WARNING!


Battery electrolyte is a corrosive acid and should be handled with care. If you spill or splash electrolyte on any part of the body, immediately flush the exposed area with liberal amounts of water and seek medical attention as soon as possible.

⚠ WARNING!

Ventilate the engine compartment before working on batteries or battery connections.

IMPORTANT:

Batteries can be damaged if they are left discharged, and can also freeze and burst easier in cold weather. If the engine is not going to be used for a longer period of time, the batteries should be fully charged, trickle charged if possible.

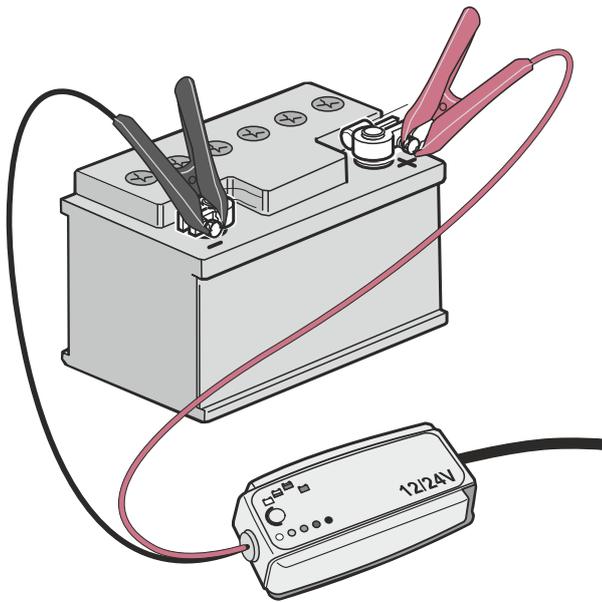

P0022892

Maintenance

It is important to always follow the battery manufacturer's recommendation and instruction when replacing and charging batteries. Depending on battery type, the instructions for maintenance and charging may vary.

Modern batteries are normally maintenance free, but there are some actions that are recommended to increase the battery service life and avoid accidents:

- Keep the batteries clean and dry. Contamination and oxide on the batteries and battery poles can result in stray currents, voltage drop and discharge, especially in wet weather.
- Remove oxidation from the battery poles and terminals, using a brass brush.
- Tighten the terminals securely and grease them with terminal grease or petroleum jelly. Loose battery connections may cause damage to the engine's electrical system.
- Charge the battery regularly. A battery that is kept fully loaded has a maximum service life. The easiest way to check if a battery needs charging is to use a voltmeter.

NOTICE! If low starter battery alarm occur, the battery may get drained which might result in loss of functions and engine stopping.

Replacing Battery

IMPORTANT:

Make sure that the new battery fulfills the specifications in *Technical Data*. Read the information supplied with the battery before you begin the installation.


IMPORTANT:

Do not disconnect the batteries with the engine running.

Sensitive electrical components can be immediately damaged.

⚠ WARNING!

Never confuse the positive and negative poles on the batteries. Risk of arcing and explosion.

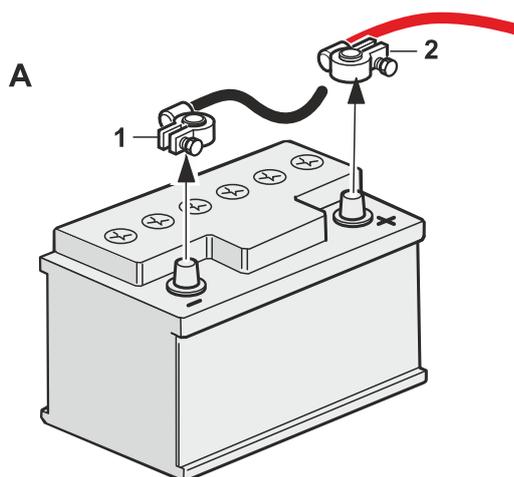

Disconnecting (A)

- 1 Untighten the nut and remove the – cable (black).
- 2 Untighten the nut and remove the + cable (red).


Remove the battery.

Connecting (B)

Place the new battery.

- 1 Connect the + cable (red) to the + pole on the battery and tighten the nut.
- 2 Connect the – cable (black) to the – pole on the battery and tighten the nut.

NOTICE! Hand in the old battery to a re-cycling station.

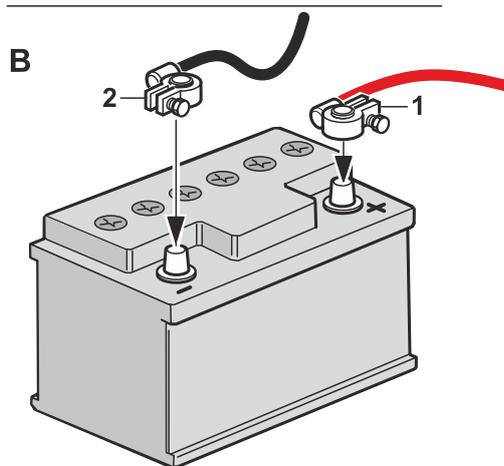

P0022893

Storage

To prevent the engine and other equipment from being harmed during long (2 months or more) periods out of service, it must be conserved. Conservation protects the engine from freezing and corrosion damages.

It is of utmost importance that the conservation is performed correctly, therefore we have compiled a checklist covering the most important points. Before taking the engine out of service for long periods, Volvo Penta recommends that the engine is checked by a qualified workshop for possible need for overhaul or repair.

⚠ CAUTION!

Read the chapter on Maintenance in the Operator's Manual before starting work. It contains instructions on how to carry out maintenance and service operations in a safe and technical correct manner.

⚠ WARNING!

Conservation oils can be flammable and dangerous to inhale. Ensure good ventilation. Use a protective face mask when spraying.

IMPORTANT:

Washing with a power washer: Never aim the water jet at radiators, charge air cooler, seals, rubber hoses or electrical components.



P0002089

- **For up to 8 month's stoppage:**
Change the oil and oil filter on the engine, then run the engine until warm.
- **More than 8 month's stoppage:**
Conserve the lubrication and fuel systems with conservation oil. Refer to the section *Conservation of the lubrication and fuel systems for more than 8 months' stoppage*.
- Make sure the coolant has adequate antifreeze properties. Top up as necessary.
Alternatively, you can drain the coolant (also drain the coolant filter).
- Drain any water and contamination from the fuel filters and fuel tank. Fill the fuel tank completely, to avoid condensation.
- Disconnect the battery cables, clean and charge the batteries. Trickle charge the batteries while the equipment is in storage. **A poorly charged battery can freeze and burst.**
- Clean the outside of the engine. Do not use a high pressure washer for engine cleaning. Touch up paint damage with Volvo Penta original paint.
- Put a note on the engine with the date, type of conservation and the conservation oil used.
- Cover the air filter, exhaust pipe and engine if necessary.

Bringing Out of Storage

- Remove any covers from the engine, air filter and exhaust pipe.
- Fill the engine with the correct quality and viscosity oil into the engine, as necessary, refer to *Technical Data, Lubrication System*. Install a new oil filter if the filter was not changed during conservation.
- Install new fuel filters and bleed the fuel system.
- Check the drive belt(s).
- Check the condition of all rubber hoses, and retighten the hose clamps.
- Close the drain taps and install any drain plugs.
- Check the coolant level. Top up as necessary.
- Connect the fully charged batteries.
- Start the engine and warm it up at fast idle with no load.
- Check that no oil, fuel or coolant leakage occurs.

Conservation of the lubrication and fuel systems for more than 8 months' stoppage:

- Drain the engine oil and fill up with **conservation oil*** to just over the MIN marking on the dipstick.
- Connect the fuel suction and return hoses to a 1/3 full jerrican containing **conservation oil*** and 2/3 diesel fuel.
- Bleed the fuel system.
- Start the engine and run at a fast idle until about 2 liters (0.6 US gal) of the fluid in the jerrican have been used. Stop the engine and re-connect the fuel suction and return lines.
- Drain the conservation oil from the engine.
- Follow the other instructions on the previous page.

* Conservation oils are sold by oil companies.

Technical Data

Engines

TAD841GE, TAD842GE, TAD843GE

Type designation	TAD841GE, TAD842GE, TAD843GE
Power	Refer to the sales literature
Torque	Refer to the sales literature
No. of cylinders	6
Bore	110 mm (4.33 inch)
Stroke	135 mm (5.31 inch)
Displacement	7,7 dm ³ (470 in ³)
Weight, wet (engine only)	775 kg (1709 lb)
Firing order	1-4-2-6-3-5
Compression ratio	17.5:1
Idling speed	900

TAD851GE, TAD852GE, TAD853GE

Type designation	TAD851GE, TAD852GE, TAD853GE
Power	Refer to the sales literature
Torque	Refer to the sales literature
No. of cylinders	6
Bore	110 mm (4.33 inch)
Stroke	135 mm (5.31 inch)
Displacement	7,7 dm ³ (470 in ³)
Weight, wet (engine only)	775 kg (1709 lb)
Firing order	1-4-2-6-3-5
Compression ratio	17.5:1
Idling speed	900

Lubrication System

Oil capacity including oil filters, approx.:	
TAD841-43GE, TAD851-53GE	27 liters (7.13 US gal)
Oil Sump	
Min	19 liters (5.02 US gal)
Max	24 liters (6.36 US gal)
Oil pressure At rated engine rpm	
TAD841-43GE, TAD851-53GE	425 kPa (62 psi)
Oil filter	
Full flow filter	1
Lube oil pump	
Type	Gear driven

Oil recommendations

Oil quality	Oil change interval, reached first in operation:
VDS-3, VDS-4, VDS-4.5	500 hours or 12 months


VDS = Volvo Drain Specification

Viscosity

Select the viscosity according to the table.

The temperature values refer to stable ambient temperatures.

NOTICE! Volvo Penta recommendation for lowest possible fuel consumption and optimal durability is to use SAE 10W-30 oil when the viscosity table allows.

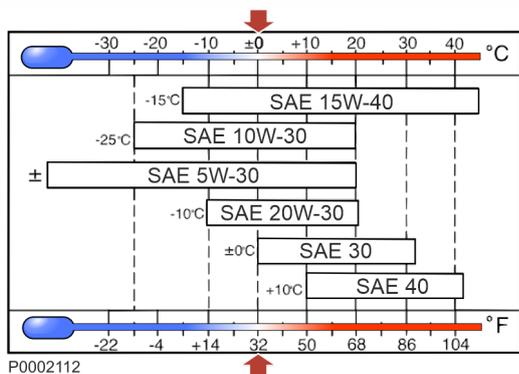

P0002112

Fuel System

General requirements

Volvo Penta diesel engines are certified for compliance with emission legislations with the diesel test fuels specified by law. These fuels correspond with diesel fuel standards EN 590, ASTM D975, JIS K2204 and paraffinic diesel fuel standard EN 15940. Volvo Penta guarantees compliance with emission legislation and fulfillment of expected lifetime as long as the specified restrictions are followed.

It is the responsibility of the fuel suppliers to always ensure that their fuels meet relevant requirements and are fit for their intended purpose. Their responsibility includes any use of additives for proper engine performance and function.

Special requirements are placed on cold-flow properties, that is, temperature limit values of fuel filterability during operation in winter conditions.

Restrictions for specified diesel fuels

- **Max density for ASTM D975 No 2-D: 860 kg/m³**
Insufficient density reduces the power and increases the fuel consumption. Excessive density endangers the durability and function of the fuel injection equipment.
- **Max lubricity (wsd 1.4) for JIS K 2204: 460 µm**
Sufficient fuel lubricity is essential to protect the fuel injection system against excessive wear.

Restrictions for other diesel fuels

Volvo Penta also approves the use of other diesel fuels as long as the here specified restrictions are followed. However Volvo Penta does not guarantee compliance with emission legislation or fulfillment of expected lifetime with these other diesel fuels.

NOTICE! Operators must check permission for usage of these fuels according to regional, national or local regulations.

- **Min cetane number: 40**
An insufficient cetane number ("ignitability") leads to poor startability and increased exhaust emissions.
- **Max density at 15 °C: 860 kg/m³**
Insufficient density reduces the power and increases the fuel consumption. Excessive density endangers the durability and function of the fuel injection equipment.
- **Viscosity between 1.9 to 4.6 mm/s² at 40 °C**
Insufficient viscosity reduces the power and increases the fuel consumption. Excessive viscosity endangers the durability and function of the fuel injection equipment.
- **Max lubricity (wsd 1.4): 520 µm**
Sufficient fuel lubricity is essential to protect the fuel injection system against excessive wear.
- **Max FAME (biodiesel) content: 10% (V/V)**
FAME is blended into diesel fuel.
- **Max sulfur content: 5000 mg/kg**

Paraffinic fuels - HVO and GTL

Paraffinic diesel fuels ("Synthetic Diesel") have higher cetane numbers and lower densities than diesel fuels. HVO (Hydrotreated Vegetable Oils) is renewable paraffinic fuels. GTL (Gas-To-Liquid) is fossil paraffinic fuels.

Volvo Penta approves the use of paraffinic diesel fuels that complies with standard EN 15940. The fuel guarantees compliance with emission legislation and fulfills the expected lifetime as long as the service requirements are followed.

Volvo Penta also approves the use of fuel blends between these paraffinic fuels and diesel fuels that comply with the quality requirements.

Biodiesel fuels

Alternative fuels, including biodiesel, that are not substantially similar to the required test fuels may adversely affect engine emissions compliance. As a result, Volvo Penta does not warrant the engine will conform to applicable emissions limits when operated on, or having been operated on, biodiesel or other alternative fuels that are not substantially similar to specified test fuels used for certification.

The use of biodiesel up to maximum 10% (B10) in and of itself, will not affect the manufacturers mechanical warranty, provided the biodiesel used in blend conforms to EN590, EN16734, ASTM D975 and ASTM D7467. Other relevant local fuel standards that fulfill the above mentioned standards may also be used. A minor drop in engine power will occur when using biodiesel.

NOTICE! Biodiesel manufactured by FAME (Fatty Acid Methyl Esther) process is hygroscopic and therefore increase the risk of bacterial growth in the fuel. This may lead to blocked fuel filters. Engine not consuming a full fuel tank within 4 weeks must not use biodiesel.

Higher levels of biodiesel, up to B30, may be used with restrictions. Fuel according to EN 16709 or ASTM D7467, or relevant local fuel standards that fulfill mentioned biodiesel fuel standards, must be used. Volvo Penta does not warrant the engine will conform to applicable emissions limits when operated on biodiesel or another alternative fuels, that are not substantially similar to specified test fuels used for certification.

Service restrictions for diesel fuel with FAME content between 11% and 30% (B11 to B30)

- Lube oil quality VDS-4 or VDS-4.5 shall be used.
- Oil dilution may occur. Make sure that oil level is not exceeding maximum level, in that case change the oil.
- Lube oil change intervals shall be halved, or utilize oil sampling analysis.
- The engines should be fitted with fuel filters with water separators.
- A fuel heater is required, when high FAME diesel fuels are used below freezing point.
- Biodiesel is aggressive to some materials used in fuel system components. Inspect seals, hoses, rubber and plastic components daily. Replace any component that is damaged, softened or leaking. Clean biodiesel from painted surfaces immediately to prevent paint damage.
- Do not use these fuels for engines with long downtime periods.
- If the engine has not been used for a period of 4 weeks or more, the tank and the fuel system shall be flushed clean by running the engine on at least one full tank of diesel fuel.
- When shifting from diesel fuel to high FAME diesel fuel.
 - The fuel hoses and sealings shall be replaced.
 - The fuel tank shall be cleaned and the fuel filter shall be replaced after 50 h.

Cooling System

Type	Pressurized, sealed
Pressure cap, max opening pressure	75 kPa (10.9 psi)
Coolant	
Volume (engine)	17 liters (4.5 US gal)
Volume (engine with standard radiator and hoses)	51 liters (13.47 US gal)
Thermostat	
Qty	1 pc
Opening temperature	85 °C (185 °F)
Fully open at	95 °C (203 °F)



P0013077

Coolant, Mixing

⚠ WARNING!

All coolant is hazardous and harmful to the environment. Do not consume. Coolant is flammable.

IMPORTANT:

Always use the same type of coolant that is already in the engine. Different types of coolant must not be mixed with each other. Risk of reduced cooling function and performance by clogging and isolation.

Coolant shall be based on Organic Acid Technology (OAT).

Follow the mixing recommendation on the product.

The coolant should be mixed with distilled, deionized water. For Volvo Penta specified water requirements; refer to *Water Quality*, page 56.

NOTICE! Always use “Ready Mixed” coolant if water quality cannot be determined or if it does not fulfill ASTM D4985.

NOTICE! Never mix more than 60% concentrated coolant with water. A greater concentration provides reduced cooling effect with the risk for overheating and reduced freeze protection.



P0002463

Water Quality

ASTM D4985:

Total solid particles	<340 ppm
Total hardness	<9,5° dH
Chloride	<40 ppm
Sulfate	<100 ppm
pH value	5.5–9
Silica (acc. ASTM D859)	<20 mg SiO ₂ /l
Iron (acc. ASTM D1068)	<0.10 ppm
Manganese (acc. ASTM D858)	<0.05 ppm
Conductivity (acc. ASTM D1125)	<500 µS/cm
Organic content, COD _{Mn} (acc. ISO8467)	<15 mg KMnO ₄ /l



P0002094

Electrical System


System voltage	24 V			
Batteries	2 pcs. series connected			
Battery voltage	12 V			
Max. Battery capacity	2 x 225 Ah			
Alternator				
ambient temperature 20 °C				
Engine speed	600 rpm	700 rpm	950 rpm	1250 rpm
Alternator, 110 A	80 A	95 A	110 A	115 A
ambient temperature 100 °C				
Engine speed	600 rpm	700 rpm	950 rpm	1250 rpm
Alternator, 110 A	65 A	78 A	88 A	93 A
Starter motor, output	5.0 kW (6.7 hp)			
	5.5 kW (7.4 hp)	(Start/Stop)		
Battery electrolyte specific gravity at +25 °C:				
Fully charged battery	1.28 g/cm ³ (1.24 g/cm ³)*			
Battery recharged at	1.20 g/cm ³ (1.20 g/cm ³)*			

Note! * Applies to batteries with tropical acid.

Identification Numbers

NOTICE! The engine labels are placed on the valve cover.

Example of general label

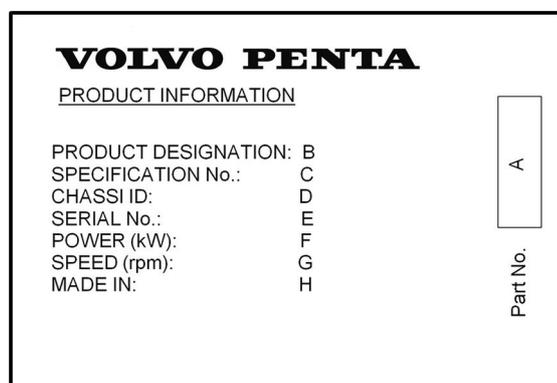

P0024526

- A Label part number
- B Product designation
- C Specification number
- D Chassis ID
- E Serial number
- F Power (kW)
- G Engine speed (rpm)
- H Country of manufacturing

VOLVO PENTA

Declaration for the installation of partially-completed machinery in accordance with Machinery Directive 2006/42/EC, Annex II, 1B

Engine Manufacturer:

AB Volvo Penta
Gropegårdsgatan, SE 405 08 Gothenburg, Sweden

Description of engine 4-cycle diesel engine. Engine types covered by this declaration:

TAD540VE TAD840VE TAD883VE TAD1140VE TAD1340VE TAD1381VE TAD1341GE-B TAD1640GE-B
TAD541VE TAD841VE TAD884VE TAD1141VE TAD1341VE TAD1382VE TAD1342GE-B TAD1641GE-B
TAD542VE TAD842VE TAD840GE TAD1142VE TAD1342VE TAD1383VE TAD1343GE-B TAD1642GE-B
TAD550VE TAD843VE TAD841GE TAD1150VE TAD1343VE TAD1384VE TAD1344GE-B TAD1644GE
TAD551VE TAD850VE TAD842GE TAD1151VE TAD 1344VE TAD1385VE TAD1345GE-B TAD1645GE
TAD552VE TAD851VE TAD843GE TAD1152VE TAD1345VE TAD1380GE TAD1346GE TAD1650GE
TAD570VE TAD852VE TAD880GE TAD1170VE TAD1350VE TAD1381GE TAD1640VE-B TAD1651GE
TAD571VE TAD853VE TAD881GE TAD1171VE TAD1351VE TAD1382GE TAD1641VE-B TAD1652GE
TAD572VE TAD870VE TAD882GE TAD1172VE TAD1352VE TAD1350GE TAD1642VE-B TAD1653GE
TAD580VE TAD871VE TAD1180VE TAD1353VE TAD1351GE TAD1643VE-B TAD1672GE
TAD581VE TAD872VE TAD1181VE TAD1371VE TAD1352GE TAD1650VE-B TAD1673GE
TAD582VE TAD873VE TAD1182VE TAD1372VE TAD1353GE TAD1651VE TAD1683GE
TAD583VE TAD880VE TAD1183VE TAD1373VE TAD1354GE TAD1670VE TAD1683GE-B
TAD881VE TAD1374VE TAD1355GE TAD1671VE TAD1683VE
TAD882VE TAD1375VE TAD1672VE

Fundamental health and safety requirements applied to, and fulfilled by, the above-mentioned engines are described in the following items in Annex I:

1.1.3, 1.1.5, 1.5.1, 1.5.2, 1.5.3, 1.5.4, 1.5.6, 1.5.13, 1.6.1, 1.6.2, 1.6.4, 1.7.1, 1.7.1.1, 1.7.1.2, 1.7.4, 1.7.4.1 and 1.7.4.3.

The relevant technical documentation is compiled as described in part B of Annex VII.

Relevant information concerning the partially completed machinery will be provided in suitable form upon justified requests from competent national authorities. The individual authorized to compile the relevant technical documentation is the signer of this declaration.

The harmonized standards applied are:

EN ISO 12100:2010: Safety of machinery – General principles for design – Risk assessment and risk reduction.
EN 1679–1+A1:2011: Reciprocating internal combustion engines – Safety – Part 1: Compression ignition engines.

The partially completed machinery also complies with the following relevant Directive:

2014/30/EU – Electromagnetic Compatibility (EMC) Directive.

Applied standards: EN 61000–6–1:2007, EN 61000–6–2:2005, EN 61000–6–3:2007, EN 61000–6–4:2007, EN 12895:2015 + A1:2019, EN-ISO 14982:2009 and EN 13766-1:2018.


For engines equipped with the Volvo Penta Start/Stop System the responsibility for the functional safety of the system lies with the machine manufacturer performing the integration.

The engines covered by this declaration may not be put into operation before the completed machinery into which they are to be installed has been declared to conform with the provision of Machinery Directive 2006/42/EC and Supply of machinery (Safety) Regulations 2008.

Name and function:

Fredrik Berggren, Safety Compliance
(The identity of the individual authorized to sign on behalf of the engine manufacturer or the latter's authorized representative.)

Signature and title:

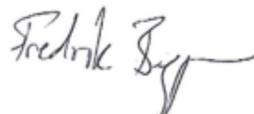

Date and place of issue: (yyyy-mm-dd) 2021–10–25
Gothenburg

Phoenix no. 50334799

VOLVO PENTA

Declaration for the installation of partially-completed machinery in accordance with
Supply of machinery (Safety) Regulations 2008, placed on the GB-market

Engine Manufacturer:

AB Volvo Penta
Gropegårdsgatan, SE 405 08 Gothenburg, Sweden

Description of engine 4-cycle diesel engine. Engine types covered by this declaration:

TAD540VE	TAD840VE	TAD883VE	TAD1140VE	TAD1340VE	TAD1381VE	TAD1341GE-B	TAD1640GE-B
TAD541VE	TAD841VE	TAD884VE	TAD1141VE	TAD1341VE	TAD1382VE	TAD1342GE-B	TAD1641GE-B
TAD542VE	TAD842VE	TAD840GE	TAD1142VE	TAD1342VE	TAD1383VE	TAD1343GE-B	TAD1642GE-B
TAD550VE	TAD843VE	TAD841GE	TAD1150VE	TAD1343VE	TAD1384VE	TAD1344GE-B	TWD1644GE
TAD551VE	TAD850VE	TAD842GE	TAD1151VE	TAD 1344VE	TAD1385VE	TAD1345GE-B	TWD1645GE
TAD552VE	TAD851VE	TAD843GE	TAD1152VE	TAD1345VE	TAD1380GE	TAD1346GE	TAD1650GE
TAD570VE	TAD852VE	TAD880GE	TAD1170VE	TAD1350VE	TAD1381GE	TAD1640VE-B	TAD1651GE
TAD571VE	TAD853VE	TAD881GE	TAD1171VE	TAD1351VE	TAD1382GE	TAD1641VE-B	TWD1652GE
TAD572VE	TAD870VE	TAD882GE	TAD1172VE	TAD1352VE	TAD1350GE	TAD1642VE-B	TWD1653GE
TAD580VE	TAD871VE		TAD1180VE	TAD1353VE	TAD1351GE	TAD1643VE-B	TWD1672GE
TAD581VE	TAD872VE		TAD1181VE	TAD1371VE	TAD1352GE	TAD1650VE-B	TWD1673GE
TAD582VE	TAD873VE		TAD1182VE	TAD1372VE	TAD1353GE	TAD1651VE	TWD1683GE
TAD583VE	TAD880VE		TAD1183VE	TAD1373VE	TAD1354GE	TAD1670VE	TWD1683GE-B
	TAD881VE			TAD1374VE	TAD1355GE	TAD1671VE	TWD1683VE
	TAD882VE			TAD1375VE		TAD1672VE	

Fundamental health and safety requirements applied to, and fulfilled by, the above-mentioned engines are described in the following items in Annex I:

1.1.3, 1.1.5, 1.5.1, 1.5.2, 1.5.3, 1.5.4, 1.5.6, 1.5.13, 1.6.1, 1.6.2, 1.6.4, 1.7.1, 1.7.1.1, 1.7.1.2, 1.7.4, 1.7.4.1 and 1.7.4.3.

The relevant technical documentation is compiled as described in part B of Annex VII.

Relevant information concerning the partially completed machinery will be provided in suitable form upon justified requests from competent national authorities. The individual authorized to compile the relevant technical documentation is the signer of this declaration.

The harmonized standards applied are:

EN ISO 12100:2010: Safety of machinery – General principles for design – Risk assessment and risk reduction.
EN 1679–1+A1:2011: Reciprocating internal combustion engines – Safety – Part 1: Compression ignition engines.

The partially completed machinery also complies with the following relevant Directive:

2014/30/EU – Electromagnetic Compatibility (EMC) Directive.

Applied standards: EN 61000–6–1:2007, EN 61000–6–2:2005, EN 61000–6–3:2007, EN 61000–6–4:2007, EN 12895:2015 + A1:2019, EN-ISO 14982:2009 and EN 13766-1:2018.


For engines equipped with the Volvo Penta Start/Stop System the responsibility for the functional safety of the system lies with the machine manufacturer performing the integration.

The engines covered by this declaration may not be put into operation before the completed machinery into which they are to be installed has been declared to conform with the provision of Machinery Directive 2006/42/EC and Supply of machinery (Safety) Regulations 2008.

Name and function:

Fredrik Berggren, Safety Compliance
(The identity of the individual authorized to sign on behalf of the engine manufacturer or the latter's authorized representative.)

Signature and title:

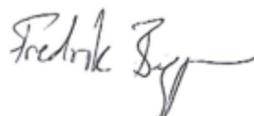

Date and place of issue: (yyyy-mm-dd) 2021–10–01
Gothenburg

Phoenix no. 50334795



A series of 25 horizontal dotted lines spanning the width of the page, providing a guide for handwriting practice.

A		W	
After Engine Shutdown.....	26	Water Quality.....	56
Alarms.....	23		
Auxiliary Stop.....	25		
B			
Battery.....	48		
Before Engine Shutdown.....	25		
Before Starting.....	20		
C			
Charge Air Cooler, External Cleaning.....	44		
Coolant Level, Checking and Topping Up.....	42		
Coolant, Draining.....	44		
Cooling System.....	41, 55		
Cooling System, Cleaning.....	45		
D			
Diagnostic Function.....	27		
Draining condensate, fuel system.....	38		
Drive Belt, Check and Replace.....	33		
E			
Electrical Connections.....	47		
Electrical System.....	47, 57		
EMS (Engine Management System).....	19		
Engine, General.....	33		
Engines.....	18, 52		
Erasing fault codes.....	27		
Excessive strain on a product and components.....	15		
F			
Fault Tracing.....	28		
Fuel Filter, Replace.....	39		
Fuel Pre-filter, Replace.....	39		
Fuel System.....	38, 54		
Fuel, oils and coolant.....	13		
I			
Identification Numbers.....	57		
M			
Main switch.....	47		
Maintenance and replacement parts.....	14		
Maneuvering.....	23		
N			
Never Use Start Spray.....	22		
O			
Oil Filter, Replace.....	36		
Oil level, checking and topping up.....	35		
Operation at low load.....	23		
Orientation.....	32		
R			
Reading the Instruments.....	23		
S			
Starting in Extreme Cold.....	21		
Starting the Engine.....	21		
Starting Using Auxiliary Batteries.....	22		
Stop the Engine.....	25		
V			
Viscosity.....	53		
Volvo Penta Action Service.....	17		
Volvo Penta Dealer Network.....	17		



A series of horizontal dotted lines spanning the width of the page, providing a guide for handwriting practice. The lines are evenly spaced and extend across the entire width of the page.

ENG

This Operator's Manual may be ordered in a different language free of charge up to 12 months after delivery, via internet.

<http://manual.volvopenta.com/coupon/>

If internet access isn't possible, please contact your Volvo Penta dealer.

GER

Diese Betriebsanleitung kann bis zu 12 Monate nach der Lieferung über Internet kostenlos in einer anderen Sprache bestellt werden.

<http://manual.volvopenta.com/coupon/>

Wenn Sie keinen Internet-Zugriff haben, kontaktieren Sie bitte Ihren Volvo Penta-Händler.

FRE

Ce manuel d'utilisation peut être commandé gratuitement sur Internet en différentes langues, jusqu'à 12 mois après la date de livraison.

<http://manual.volvopenta.com/coupon/>

Veuillez contacter votre Distributeur Volvo Penta si vous avez un problème d'accès à l'Internet.

SPA

El presente libro de instrucciones puede solicitarse en otro idioma diferente, libre de cargo, hasta 12 meses después de la entrega, mediante internet.

<http://manual.volvopenta.com/coupon/>

Si no se tiene acceso a internet, contacten al su concesionario Volvo Penta.

ITA

Il manuale per l'operatore può essere ordinato tramite Internet, in varie lingue e per consegna gratuita, entro 12 mesi dalla consegna del prodotto

<http://manual.volvopenta.com/coupon/>

Se l'accesso a Internet risulta impossibile, contattare la concessionaria Volvo Penta.

SWE

Denna instruktionsbok kan beställas via internet på ett annat språk gratis i upp till 12 månader efter leverans.

<http://manual.volvopenta.com/coupon/>

Kontakta din Volvo Penta-återförsäljare om du inte har tillgång till internet.

DUT

Dit instructieboek kan gratis via internet in een andere taal worden besteld tot 12 maanden na aflevering.

<http://manual.volvopenta.com/coupon/>

Als toegang tot het internet niet mogelijk is, neem dan contact op met uw Volvo Penta dealer.

DAN

Denne instruktionsbog kan bestilles gratis på et andet sprog via Internettet i op til 12 måneder efter leveringen.

<http://manual.volvopenta.com/coupon/>

Hvis det ikke er muligt at bestille via Internettet, bedes du kontakte din Volvo Penta forhandler.

FIN

Tämä käyttöohjekirja on tilattavissa Internetin kautta veloituksetta eri kielillä 12 kuukauden ajan toimituksen jälkeen.

<http://manual.volvopenta.com/coupon/>

Jos sinulla ei ole Internet-yhteyttä, ota yhteys lähimpään Volvo Penta jälleenmyyjään.

POR

Este Manual do Operador pode ser encomendada em idiomas diferentes isento de custos até 12 meses após entrega, via internet.

<http://manual.volvopenta.com/coupon/>

Se não for possível aceder à internet, contacte o seu concessionário Volvo Penta.

GRC

Το παρόν Βιβλίο Χρήσης μπορεί να παραγγελθεί δωρεάν σε άλλη γλώσσα μέχρι 12 μήνες μετά την παράδοση, μέσω διαδικτύου.

<http://manual.volvopenta.com/coupon/>

Εάν δεν είναι δυνατή η πρόσβαση στο ιαδίκτυο, παρακαλούμε επικοινωνήστε με το δικό σας αντιπρόσωπο της Volvo Penta.

TUR

Bu Kullanım Kılavuzu, teslimden 12 ay sonrasına kadar İnternet yoluyla ücretsiz olarak farklı bir dilde sipariş edilebilir.

<http://manual.volvopenta.com/coupon/>

İnternet mümkün değilse, lütfen Volvo Penta yetkili satıcınızla temasa geçin.

CHI

本操作手册可通过互联网以不同的语言进行订购，交付后可免费使用达12个月。

<http://manual.volvopenta.com/coupon/>

如果无法访问互联网，请与沃尔沃遍达经销商联系。

BZS

Este Manual de operador pode ser encomendado em um idioma diferente, gratuitamente, até 12 meses após a entrega, via internet.

<http://manual.volvopenta.com/coupon/>

Caso o acesso à internet não for possível, contatar seu distribuidor Volvo Penta.

JPN

このオペレーターズ マニュアルの他言語版が、発行後最高12か月間、インターネットより無料で発注可能です。

<http://manual.volvopenta.com/coupon/>

インターネットにアクセスできない場合は、担当のボルボペンタディーラーまでご連絡ください。

ARA

من الممكن طلب دليل المشغل بلغة أخرى مجاناً عبر الإنترنت لفترة تصل إلى ١٢ شهرًا من بعد التسليم.

[http:// manual.volvopenta.com/coupon](http://manual.volvopenta.com/coupon/)

إذا كان الوصول إلى الإنترنت غير متاح، فالرجاء الاتصال بوكيل Volvo Penta.

V O L V O P E N T A

